PSEG NUCLEAR L.L.C

Salem Unit 1

SALEM OPERATIONS

S1.OP-SO.CVC-0012(Q) - Rev. 31

CVCS DEMINERALIZER - NORMAL OPERATION

ADHERENCE LEVEL: LEVEL 2 - REFERENCE USE

Biennial Review Performed: Yes □ No ⊠

Configuration Change Packages and Affected Document Numbers incorporated into this revision:

None

OTSCs incorporated into this revision:

• 30A

Operational Experience (OPEX) incorporated into this revision:

None

	Revision Summary
Location	Description of Change
Entire Procedure	Converted to updated Word Template.
3.1.8 & 3.2.1	Added the requirement of a timing device. [70204837, OTSC 30A]
4.7.17, 4.8.7, 4.9.7, 4.10.4.4, 4.10.5.7, 4.10.5.14, 4.11.8.	Revised to give throttling direction [70204837, OTSC 30A]
4.3.3	Revised to remove deborating bed demin from service only when necessary [70183909]
Attachment 7, Section S	Revised to allow OPEN or CLOSE IV, dependent on status of Letdown alignment to deborating bed. [70140517]
4.13.16	Added step to remove deborating demin if no longer needed for reactivity control. [70203096]
4.14.7.12	Added step to give operator action if sample results not obtained [70204976]
4.14.7.7, 4.14.7.8, 4.14.7.11, Attachment 7 Table 16	Sections 4.13 and 4.14 update to include a flowpath IV IAW Attachment 7 before placing 1CV27 to FLOW TO DB BED position. Updated Attachment 7, sections N and O by removing 1CV205 IV and added Independent Verification for closing 1CV205 into the main body for each evolution. [CRCA 70174717-0030 (From Unit 2)]
All	 Changed steps in the procedure to refelect the preferred method for operating the CV18 when closing orifice valves are in Auto during normal operations for sections: 4.1.6.c-f, 4.1.19.3-6, 4.2.4.1.c-f, 4.2.15.3-6, 4.7.4.1.c-f, 4.7.16.3-6, 4.10.5.1.c-f, 4.10.5.13.c-f, 4.13.4.3-6, 4.13.13.5-8, 4.14.7.1.c-f, 4.14.7.17.d-g, 4.15.8.7.c-f, 4.15.8.15.c-f, 4.16.6.1.c-f, 4.16.6.10.c-f, Attachment 6 3.c.2.c-f, Attachment 6 14.c-f, Attachment 8 1.c-f, and Attachment 8 9.c-f. [70213017]

IMPLEMENTATION REQUIREMENTS:

Effective Date:

Page	2	of	125
	R	lev	: 31

All	•	Added Sign Offs with IV underneath for steps requiring Independent Verifications.
2.1.21	•	Added precaution associated with the preferred method for operating the CV18 when closing orifice valves is in Audo during normal operations. [70213017]

CVCS DEMINERALIZER - NORMAL OPERATION

SECTION

PAGE

TABLE OF CONTENTS

1.0	PURF	POSE AND SCOPE5
2.0	PREC	CAUTIONS AND LIMITATIONS6
3.0	PREF	REQUISITES9
4.0	INST	RUCTIONS11
	4.1	Borating a Mixed Bed Demin With No Other Mixed Bed Demin In Service11
	4.2	Borating Standby Mixed Bed Demin With A Mixed Bed Demin In Service 16
	4.3	Placing a Borated Mixed Bed Demin In Service With No Other Mixed Bed Demin In Service22
	4.4	Placing a Borated Mixed Bed Demin In Service With A Mixed Bed Demin In Service (i.e., Swapping Inservice Mixed Bed Demins)27
	4.5	Placing a Borated Standby Mixed Bed Demin In Service for RCS Chemistry Control31
	4.6	Removing CVCS Demin Header from Service33
	4.7	Placing a Non Borated Cation Bed Demin (with Mixed Resin) In Service 34
	4.8	Placing a Borated Cation Bed Demin (with Mixed Resin) In Service 39
	4.9	Placing a Borated Cation Bed Demin (with Mixed Resin) In Service for RCS Chemistry Control40
	4.10	Placing a Cation Bed Demin (with Cation Resin) In Service42
	4.11	Placing a Cation Bed Demin (with Cation Resin) In Service for RCS Chemistry Control48
	4.12	Removing the Cation Bed Demin from Service50
	4.13	Placing a Deborating Bed Demin In Service (Mixed Bed Demin Available)51
	4.14	Placing a Deborating Bed Demin (with Cation Bed Resin) In Service for RCS Chemistry Control (Mixed Bed Demin Available)55
	4.15	Placing a Deborating Bed Demin (with Mixed Bed or Cation Bed Resin) In Service With No Mixed Bed Demin Available63
	4.16	Swapping Deborating Bed Demins (with Mixed Bed or Cation Bed Resin) With No Mixed Bed Demin Available78
	4.17	Removing a Deborating Bed Demin from Service84
	4.18	Mixed Bed Demin Operation During Shutdown Modes 3, 4, 5, 6 and Defueled85
	4.19	Cation Demin Operation During Shutdown Modes 3, 4, 5, 6 and Defueled89

	4.20	Completion and Review	91
5.0	REFE	RENCES AND COMMITMENTS	92
6.0	RECO	RDS	93
Attach	ment 1,	Time Required To Saturate A Mixed Bed Demin	94
Attach	ment 2,	Time Required To Saturate Cation Demin (IF Mixed Resin USED)	95
Attach	ment 3,	CVCS Demin Borating Record	96
Attach	ment 4,	Deborating Bed Demineralizer Usage	97
Attach	ment 5,	Alternate Letdown Sampling	98
Attach	ment 6,	Flushing CVCS Demin To WHUT	100
Attach	ment 7,	Independent Verification	.107
		Flushing A Deborating Bed Demineralizer When Present RCS Cb Is Greater Different From Previous Cb	. 118
Attach	ment 9,	CVCS Demineralizers - Resin Fill Valve Position Verification	123
Attach	ment 10). Completion Sign-Off Sheet	124

Rev: 31

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

1.0 PURPOSE AND SCOPE

1.1 Purpose

- 1.1.1. To provide instructions necessary to:
 - 1. Borate a Mixed Bed Resin or Cation Bed Resin Demineralizer.
 - 2. Place CVCS Demineralizers in service.
 - 3. Remove CVCS Demineralizers from service.
 - 4. Place a borated Mixed Bed Resin or Cation Bed Resin Demineralizer in service for RCS Chemistry control
 - 5. Coordinate crud burst cleanup during shutdown.

1.2 Scope

1.2.1. CVCS Demineralizer Operations

Page 6 of 125

Rev: 31


2.0 PRECAUTIONS AND LIMITATIONS

2.1 **Precautions** 2.1.1. When placing a CVCS Demin in service for RCS lithium control the applicable sections of SC.CH-AP.RC-0106(Z), Implementation of Salem Lithium Control Program should be completed as directed by Chemistry. 2.1.2. Trending R41D radiation monitor, VCT level, and PZR level should be considered to ensure that any RCS leakage is detected in a timely manner. When leakage is suspected, an RCS Water Inventory Balance should be performed IAW S1.OP-ST.RC-0008(Q), REACTOR COOLANT SYSTEM WATER INVENTORY BALANCE. 2.1.3. Changes in RCS pH should be anticipated when placing a Demin with Mixed Bed Resin or Cation Bed Resin in service. 2.1.4. To preclude the possibility of a demineralizer bed causing an inadvertent dilution or boration. CVCS blender concentration should be matched to RCS boron concentration. 2.1.5. When a Deborating Bed Demin is in service careful consideration should be given when placing another Demin Bed in service which has cooled since it was last in service. The Deborating Bed Demin will absorb more boron due to the cooling effects from placing a colder Demin Bed in service which can produce unexpected reactivity results. [80062317] 2.1.6. To prevent an inadvertent reactivity event, a Demin with Cation Bed Resin should NOT be placed in service when there is a greater than 25 ppm difference between RCS boron concentration from the last time it was in service without flushing a line volume through demineralizer to ensure water trapped in piping is equalized with RCS for boron. [C0417] 2.1.7. To prevent an inadvertent reactivity event, with the exceptions discussed in Sections 4.15 and 4.18, a Demin with Mixed Bed Resin is NOT to be placed in service to the VCT until Chemistry has determined that the demin inlet and outlet boron concentrations are within 25 ppm. [C0417] 2.1.8. Section 4.18 provides guidance on operating Mixed Bed Demins during unit shutdown for RCS cleanup. The guidance contained in Section 4.18 only applies when the plant is in Modes 3, 4, 5, 6 or Defueled. 2.1.9. When placing a Cation Bed Demin in service which contains a mixed resin then place in service IAW Sections 4.7, 4.8 or 4.9, as applicable. 2.1.10. When borating a Demin, letdown flow should be less than makeup capacity to VCT.

S1.OP-SO.CVC-0012(Q)


Page 7 of 125

CVCS DEMINERALIZER - NORMAL OPERATION

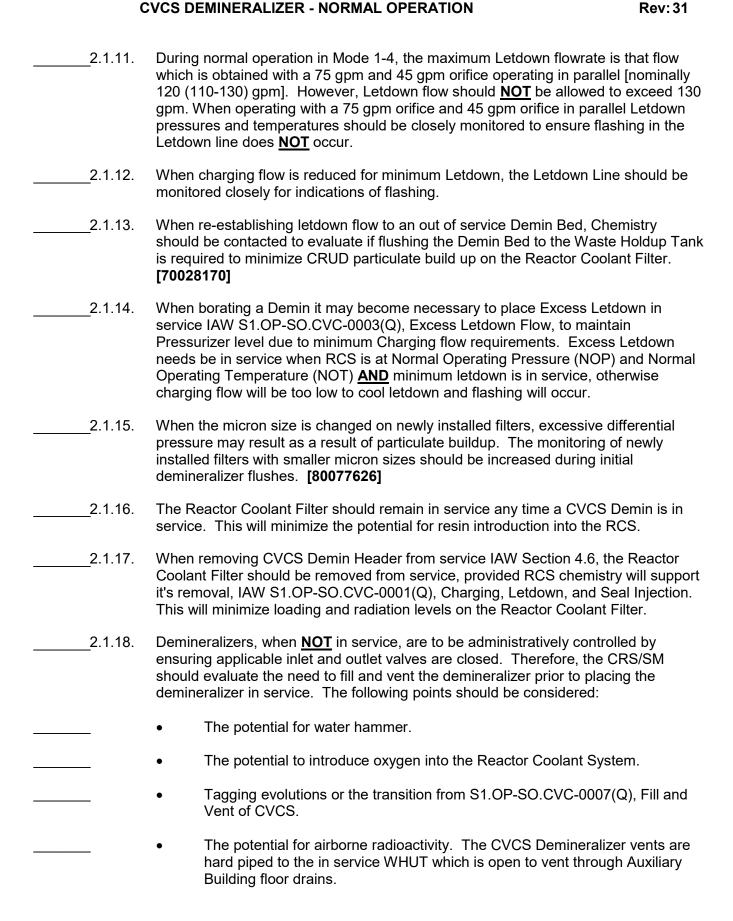

Page 8 of 125

Rev: 31

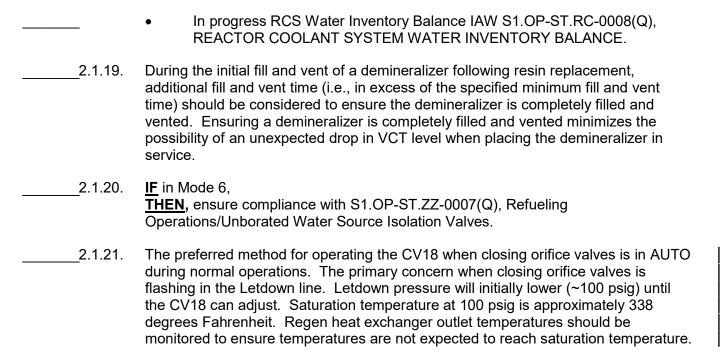

2.2 Limitations

- 2.2.1. Resin damage will occur when CVCS demineralizer inlet temperature exceeds 140°F. 1CV21, LETDOWN DEMIN BYPASS VALVE, when in AUTO will divert to VCT when temperature reaches 136°F as indicated on 1TI 130A.
- 2.2.2. Design pressure of CVCS Demins is 200 psig.
- 2.2.3. Maximum design flowrate of a Cation Bed Demin is 75 gpm.
- 2.2.4. The maximum Letdown flowrate is 180 gpm during RHR Letdown Booster Pump operation.

S1.OP-SO.CVC-0012(Q)

Page 9 of 125

CVCS DEMINERALIZER - NORMAL OPERATION Rev: 31

3.0 **PREREQUISITES** 3.1 **Prerequisities** 3.1.1. **IDENTIFY** sections of this procedure that are **NOT** to be performed with "N/A". 3.1.2. **REVIEW** components "Off Normal and Off Normal Tagged" List(s) for system and support system(s) associated with the evolution to be performed in this procedure. IF performing Section 4.18, 3.1.3. **THEN ENSURE** the plant is in Mode 3, 4, 5, 6 or Defueled. 3.1.4. **IF** placing a CVCS Demineralizer in service, THEN: 1. **ENSURE** CVC System is available IAW S1.OP-SO.CVC-0001(Q), Charging, Letdown, and Seal Injection. 2. **ENSURE** Boric Acid Blender is available IAW S1.OP-SO.CVC-0006(Q). Boron Concentration Control. 3. **ENSURE** CVC Holdup Tanks are available IAW S1.OP-SO.CVC-0004(Q), CVCS Holdup Tank System Operations. 4. **ENSURE** the Reactor Coolant Filter is in service. 5. **ENSURE** Chemistry concurrence to place a demineralizer in service is obtained. 6. IF placing any CVCS Demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, THEN ENSURE Radiation Protection is available to support the removal of Resin Fill V pit cover (Aux. 122'). 3.1.5. **IF** placing a Mixed Bed Demin in service, THEN: 1. **NOTIFY** Chemistry to evaluate if flushing the Demin Bed to WHUT is required to minimize CRUD particulate build up on the Reactor Coolant Filter. [70028170] 2. **IF** Chemistry determines flushing of CVCS Demin Bed to WHUT is required, **THEN PERFORM** Attachment 6, Flushing CVCS Demin To WHUT. 3.1.6. **IF** placing a Cation Bed or Deborating Bed Demin in service, **AND** the type of resin in the Demin is unknown or unsure. THEN CONTACT Chemistry, as required, to determine the type of resin in the Demin.

A Pre-Job Brief is conducted IAW HU-AA-1211, Briefings - Pre-Job, Heightened

Level of Awareness, Infrequent Plant Activity and Post-Job Briefings.

3.1.7.

Rev: 31 3.1 (continued) A stopwatch or other accurate timing device will be used in the control room to determine demineralizer usage duration.

Page 10 of 125

Equipment/Materials Required 3.2

3.1.8.

3.2.1. A Stop Watch or equivalent.

Page 11 of 125


S DEMINERALIZER - NORMAL OPERATION Rev: 31

4.0	INSTRUCTIONS										
4.1	Boratin	a Mixed Bed Demin With No Other Mixed Bed Demin In Service									
	_4.1.1.	OBTAIN cur Attachment	rent RCS boron concentration from Chemistry, <u>AND</u> RECORD on 3.								
	4.1.2.	SC.CH-AD.(<u>IF</u> placing a demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, <u>THEN</u> COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill Valve Position Verification. [CRCA 70108974]								
	4.1.3.	ENSURE De 4.17.	eborating Bed Demineralizers are removed from service IAW Section								
	4.1.4.	ENSURE 10 DIVERSION	CV21, LETDOWN DEMIN BYPASS, selected to MIXED BED TO VCT.								
	4.1.5.	ENSURE 10 position.	CV27, DEBORATING DEMIN 3-WAY INLET V, in FLOW TO VCT								
	4.1.6.	ADJUST Le	tdown to 45 gpm by performing the following:								
	_	1. <u>IF</u> No <u>THE</u>	ormal Letdown is in service, <u>N</u> :								
	_	a.	PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in MANUAL.								
		b.	Simultaneously PERFORM the following:								
	_		(1) OPEN 1CV3, LETDOWN ORIFICE ISOLATION, 45 GPM ORIFICE ISOLATION VALVE.								
	_		(2) ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).								
			NOTE								
	in AU orifice lower psig i outle	ITO during nor e valves is flas · (~100 psig) u is approximate t temperatures	od for operating the CV18 when closing orifice valves is mal operations. The primary concern when closing hing in the letdown line. Letdown pressure will initially ntil the CV18 can adjust. Saturation temperature at 100 ly 338 degrees Fahrenheit. Regen heat exchanger should be monitored to ensure temperatures are not aturation temperature.								
		C.	<u>IF</u> controlling Letdown pressure in AUTO,								
			(1) PLACE 1CV18 in AUTO								

Page 12 of 125

Rev: 31

4.1.6.c (continued) (2) **CLOSE** 1CV4 **OR** 1CV5, 75 GPM ORIFICE ISOLATION VALVE. d. IF controlling Letdown pressure in Manual, simultaneously **PERFORM** the following: (1) CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE. (2) ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). **ADJUST** Charging flow as necessary to match Letdown flow. e. f. WHEN Letdown pressure is at approximately 300 psig, ENSURE 1CV18 in AUTO. 2. **IF** Letdown is from RHR, THEN: a. THROTTLE 1CV8, LETDOWN PRESSURE CONTROL VALVE, to reduce letdown flow to 45 GPM. **ADJUST** Charging flow as necessary to match Letdown flow. b. 4.1.7. **ENSURE** 11CV25, 11 MIXED BED DEMIN OUTLET VALVE is CLOSED. ENSURE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE is CLOSED. 4.1.8. **NOTE** When borating a mixed bed demin, letdown flow should be less than makeup capacity to VCT. **CAUTION** Mixed Bed Demineralizer valve manipulations are to be conducted slowly to minimize the potential to move resin out of the demineralizer during the fill and vent. 4.1.9. IF 11 MIXED BED Demin is to be borated, THEN: 1. **IF** fill and vent is required (Refer to Step 2.1.18), THEN: a. Slowly THROTTLE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE 3 turns OPEN.

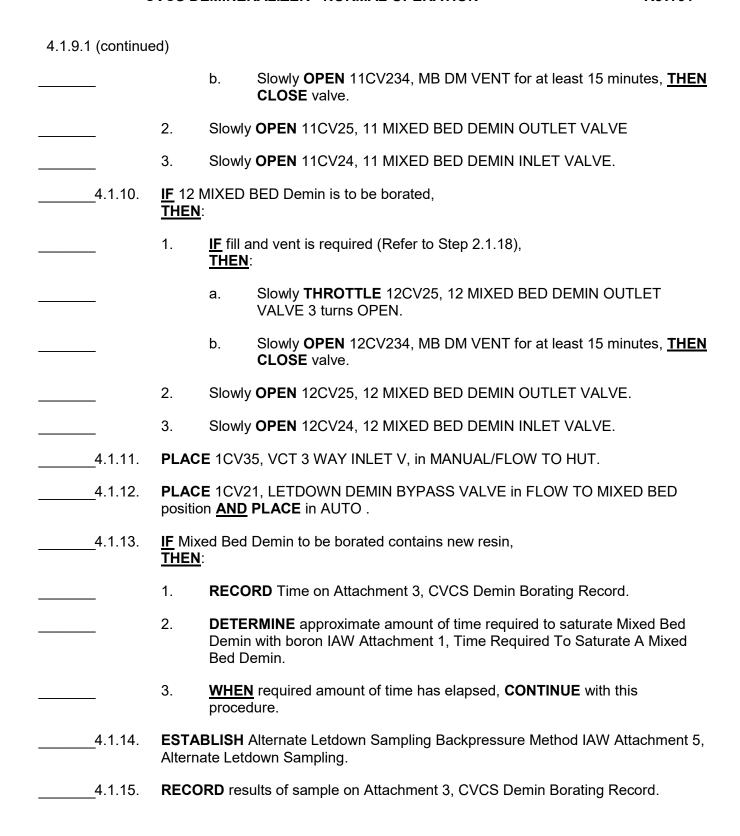

Page 14 of 125

Rev: 31 4.1 (continued) 4.1.16. **IF** difference in boron concentration is greater than 25 ppm. THEN: 1. ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or 2. **RECORD** results of samples on Attachment 3, CVCS Demin Borating Record. 3. **WHEN** difference in boron concentration is less than or equal to 25 ppm, **CONTINUE** with this procedure. PLACE 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position AND PLACE in 4.1.17. AUTO. **NOTIFY** Chemistry that 11 (12) Mixed Bed Demineralizer is in service. 4.1.18. 4.1.19. **IF** Normal Letdown is in service, THEN: 1. PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in MANUAL. 2. Simultaneously **PERFORM** the following: a. **OPEN** 1CV4, LETDOWN ORIFICE ISOLATION VALVE, **OR** 1CV5, LETDOWN ORIFICE ISOLATION VLV, 75 GPM Orifice Isolation Valve. ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as b. necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). NOTE The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature. 3. **IF** controlling Letdown pressure in AUTO,

PLACE 1CV18 in AUTO

CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.

a.

b.

Page 15 of 125 Rev: 31

4.1.19 (continu	ed)						
	4.	$\underline{\textbf{IF}}$ controlling Letdown pressure in Manual, simultaneously $\textbf{PERFORM}$ the following:					
		a. CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.					
		b. ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).					
	5.	ADJUST Charging flow as necessary to match Letdown flow.					
	6.	<u>WHEN</u> Letdown pressure is at approximately 300 psig, ENSURE 1CV18 in AUTO.					
4.1.20.	<u>IF</u> Le <u>THE</u>	down is from RHR, <u>I</u> :					
	1.	ADJUST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired letdown flow.					
	2.	ADJUST Charging flow as necessary to match Letdown flow.					
4.1.21.		ECT a second Operator to perform Independent Verification IAW Attachment 7, pendent Verification, Section A.					
4.1.22.	UPD	ATE the following Control Room Console Station Aids, as required.					
	1.	S1-OPA-99-0007, 11 MIXED BED Demineralizer					
	2.	S1-OPA-99-0008, 12 MIXED BED Demineralizer					

Page 16 of 125 Rev: 31

4.2	Boratino	Borating Standby Mixed Bed Demin With A Mixed Bed Demin In Service									
	4.2.1.	 OBTAIN current RCS boron concentration from Chemistry, <u>AND</u> RECORD on Attachment 3, CVCS Demin Borating Record. 									
	4.2.2.	 <u>IF</u> placing a demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, <u>THEN</u> COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill Valve Position Verification. [CRCA 70108974] 									
	4.2.3.	ENSURE Deborating Bed Demineralizers are removed from service IAW Section 4.17.									
	4.2.4.	ADJU	IST Let	down to	45 gpm by performing the following:						
	-	1. <u>IF</u> Normal Letdown is in service, <u>THEN</u> :									
	-		a.	PLAC MANU	E 1CV18, LETDOWN PRESSURE CONTROL VALVE, i JAL.	in					
	-		b.	Simult	aneously PERFORM the following:						
	-			(1)	OPEN 1CV3, LETDOWN ORIFICE ISOLATION VALVE GPM ORIFICE ISOLATION VALVE.	E, 45					
	-	(2) ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).									
					NOTE						
	in AU orifice lower psig is outlet	TO duri valves (~100 p approx temper	ng norn is flash osig) un ximately atures s	nal oper ling in th til the C / 338 de should b	erating the CV18 when closing orifice valves is ations. The primary concern when closing he letdown line. Letdown pressure will initially V18 can adjust. Saturation temperature at 100 egrees Fahrenheit. Regen heat exchanger be monitored to ensure temperatures are not a temperature.						
	-		C.	<u>IF</u> con	trolling Letdown pressure in AUTO,						
	-			(1)	PLACE 1CV18 in AUTO						
	-			(2)	CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATIO VALVE.	N					
	-		d.		trolling Letdown pressure in Manual, simultaneously ORM the following:						
	-			(1)	CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATIO VALVE.	N					

Page 17 of 125 Rev: 31

4.2.4.d	(continue	ed)			
	`	,		(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
			e.	ADJU	IST Charging flow as necessary to match Letdown flow.
			f.		N Letdown pressure is at approximately 300 psig, ENSURE 8 in AUTO.
		2.	<u>IF</u> Let		s from RHR,
			a.		OTTLE 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown of 45 GPM.
			b.	ADJU	IST Charging flow as necessary to match Letdown flow.
					NOTE
	Whon	horotin	a a miv	ad bad	domin lotdown flow should be lose than
		up capa			demin, letdown flow should be less than
	4.2.5.	PLAC	E 1CV3	35, VCT	3 WAY INLET V, in MANUAL/FLOW TO HUT.
	4.2.6.	<u>IF</u> 11 THEN		BED D	emin is to be borated,
		1.	Slowly	OPEN	I 11CV24, 11 MIXED BED Demin Inlet Valve.
		2.	THEN		of the isolated to the step 2.1.18), OPEN 11CV234, MB DM VENT for at least 2 minutes, then expected.
		3.	OPEN	I 11CV2	25, MB DM OUTLET VALVE.
		4.	CLOS	E 12C\	/25, MB DM OUTLET VALVE.
		5.	CLOS	E 12C\	/24, MB DM INLET VALVE.
	4.2.7.	<u>IF</u> 12 <u>THEN</u>		BED D	emin is to be borated,
		1.	Slowly	OPEN	I 12CV24, 12 MIXED BED Demin Inlet Valve.
		2.	THEN		of the is required (Refer to Step 2.1.22), OPEN 12CV234, MB DM VENT for at least 2 minutes, then expected.
		2	ODEN	I 12C\/	DE MR DM OUTLET VALVE

Page 18 of 125 Rev: 31

4.2.7 (continued) 4. **CLOSE** 11CV25, MB DM OUTLET VALVE. CLOSE 11CV24, MB DM INLET VALVE. 5. 4.2.8. ENSURE 1CV21, LETDOWN DEMIN BYPASS VALVE, in FLOW TO MIXED BED position AND PLACE in AUTO. 4.2.9. IF Mixed Bed Demin to be borated contains new resin, THEN: 1. **RECORD** Time on Attachment 3, CVCS Demin Borating Record. 2. **DETERMINE** approximate amount of time required to saturate Mixed Bed Demin with boron IAW Attachment 1, Time Required To Saturate A Mixed Bed DeminAttachment 2, Time Required To Saturate Cation Demin (IF Mixed Resin USED). 3. WHEN required amount of time has elapsed, CONTINUE with this procedure. 4.2.10. **ESTABLISH** Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling. 4.2.11. **RECORD** results of sample on Attachment 3, CVCS Demin Borating Record. 4.2.12. **IF** difference in boron concentration is greater than 25 ppm, THEN: 1. **ESTABLISH** Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less). 2. **RECORD** results of samples on Attachment 3, CVCS Demin Borating Record. 3. **WHEN** difference in boron concentration is less than or equal to 25 ppm. **CONTINUE** with this procedure. 4.2.13. PLACE 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position AND PLACE in AUTO. 4.2.14. **NOTIFY** Chemistry that 11 (12) Mixed Bed Demineralizer is in service. 4.2.15. IF Normal Letdown is in service, THEN: 1. PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in MANUAL.

Page 19 of 125 Rev: 31

4.2.15 (continued) 2. Simultaneously **PERFORM** the following: **OPEN** 1CV4, LETDOWN ORIFICE ISOLATION VALVE, **OR** 1CV5, a. LETDOWN ORIFICE ISOLATION VLV. ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as b. necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). NOTE The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature. 3. **IF** controlling Letdown pressure in AUTO, PLACE 1CV18 in AUTO a. **CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.** b. IF controlling Letdown pressure in Manual, simultaneously PERFORM the 4. following: **CLOSE** 1CV3, 45 GPM ORIFICE ISOLATION VALVE. a. b. ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). 5. **ADJUST** Charging flow as necessary to match Letdown flow. **WHEN** Letdown pressure is at approximately 300 psig, **ENSURE** 1CV18 in 6. AUTO. 4.2.16. **IF** Letdown is from RHR, THEN: ADJUST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired letdown flow. 1. 2. **ADJUST** Charging flow as necessary to match Letdown flow.

S1.OP-SO.CVC-0012(Q)

Page 20 of 125

CVCS DEMINERALIZER - NORMAL OPERATION Rev: 31 1.2 (continued)

4.2 (continued)										
4.2.17.	<u>IF</u> a M 4.5, <u>THEN</u>		ed Dem	in was p	laced ir	n service	for RCS	chemis	try con	rol in Section
	1.									n service using RD below:
			<i>§</i>	gallons	÷		gallons minute	= .		— minutes
	2.						n has bee it from se			r the time s:
		a.	<u>IF</u> rem	•	1 MIXE	D BED [Demin fron	m servi	ce,	
			(1)	Slowly VALVE		12CV24	, 12 MIXE	ED BED	DEMII	N INLET
			(2)	Slowly VALVE		12CV25	i, 12 MIXE	ED BED	DEMII	N OUTLET
			(3)	CLOS	E 11CV	25, 11 N	IIXED BE	D DEM	IN OU	ΓLET VALVE.
			(4)	CLOS	E 11CV	24, 11 N	IIXED BE	D DEM	IN INLI	ET VALVE.
		b.	<u>IF</u> rem		2 MIXE	D BED [Demin from	m servio	ce,	
			(1)	Slowly VALVE		11CV24	, 11 MIXE	ED BED	DEMII	N INLET
			(2)	Slowly VALVE		11CV25	5, 11 MIXE	ED BED	DEMII	N OUTLET
			(3)	CLOS	E 12CV	25, 12 N	IIXED BE	D DEM	IN OU	ΓLET VALVE.
			(4)	CLOS	E 12CV	24, 12 N	IIXED BE	D DEM	IN INLI	ET VALVE.
4.2.18.	THEN	DIREC	T a sec	emin is i cond Ope endent V	erator t	o perforr	n Indeper tion B.	ndent V	erificati	on IAW
4.2.19.	THEN	DIREC	T a sec	emin is i cond Ope endent V	erator t	o perforr	n Indeper tion C.	ndent V	erificati	on IAW

Page 21 of 125 Rev: 31

4.2 (continued)								
4.2.20.	UPDATE the following Control Room Console Station Aids, as requ							
	1.	S1-OPA-99-0007, 11 MIXED BED Demineralizer						
	2.	S1-OPA-99-0008, 12 MIXED BED Demineralizer						

Page 22 of 125

Rev: 31

4.3 Placing a Borated Mixed Bed Demin In Service With No Other Mixed Bed Demin In Service 4.3.1. **OBTAIN** current RCS boron concentration from Chemistry, **AND RECORD** on Attachment 3, CVCS Demin Borating Record. 4.3.2. IF Mixed Bed Demin contains new resin, OR CRS/SM or Chemistry determines present RCS boron concentration is greater than 25 ppm different from RCS boron concentration when Mixed Bed Demin was last in service, THEN TERMINATE performance of this section, AND PLACE Mixed Bed Demin in service IAW Section 4.1 **OR** 4.2. **[C0417]** 4.3.3. IF Deborating Bed Demin fill and vent is required, OR IF the SM/CRS or Chemistry determines present RCS boron concentration is greater than 25 ppm different from RCS boron concentration when Deborating Bed Demin was last in service, THEN ENSURE Deborating Bed Demineralizers are removed from service IAW Section 4.17. 4.3.4. ENSURE 1CV21, LETDOWN DEMIN BYPASS, selected to MIXED BED DIVERSION TO VCT. 4.3.5. ENSURE 1CV27, DEBORATING DEMIN 3-WAY INLET V, in FLOW TO VCT position. 4.3.6. ENSURE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE is CLOSED. 4.3.7. ENSURE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE is CLOSED. CAUTION Mixed Bed Demineralizer valve manipulations are to be conducted slowly to minimize the potential to move resin out of the demineralizer during the fill and vent. 4.3.8. IF placing 11 MIXED BED Demin in service, THEN: 1. **ENSURE** 12CV24, MB DM INLET VALVE, is closed. 2. **IF** fill and vent is required (Refer to Step 2.1.22), THEN: a. Slowly **THROTTLE** 11CV25, 11 MIXED BED DEMIN OUTLET VALVE 3 turns OPEN. Slowly **OPEN** 11CV234, MB DM VENT for at least 15 minutes, **THEN** b. **CLOSE** valve. 3. Slowly **OPEN** 11CV25, 11 MIXED BED DEMIN OUTLET VALVE

Page 23 of 125 Rev: 31

4.3.8 (continued) 4. Slowly **OPEN** 11CV24, 11 MIXED BED DEMIN INLET VALVE. 5. PLACE 1CV35, VCT 3 WAY INLET V, in MANUAL/FLOW TO HUT. PLACE 1CV21, LETDOWN DEMIN BYPASS VALVE in FLOW TO MIXED 6. BED position AND PLACE in AUTO. 7. WHEN 500-1000 gallons has been flushed through the demineralizer, PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO VCT position AND PLACE in AUTO . [CAPR 70062042] CAUTION Maximum Letdown flow rate is 130 gpm. Flow may be restricted by throttling the Mixed Bed Demineralizer outlet valve(s) to maintain letdown flow rate less than or equal to 130 gpm when RCS cleanup is required. When throttling CV25 to control letdown flow all valve manipulations must be performed slowly and coordinated with adjustments of the 1CV18. When throttling CV25 monitor 1PI136 to ensure pressure does **NOT** exceed 165 psig. 8. **IF** Letdown flow is greater than 130 gpm, **THEN COORDINATE** the following: MONITOR 1PI136 to ensure pressure does NOT exceed 165 psig. a. Slowly THROTTLE 11CV25, 11 MIXED BED DEMIN OUTLET b. VALVE, to limit Letdown flow to less than or equal to 130 gpm. NOTE 1CV18 should be adjusted to maintain backpressure greater than saturation pressure for Letdown Heat Exchanger Inlet Temperature (T0127A, on Plant Computer). **PERFORM** the following: C. (1) ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as required to maintain letdown pressure approximately 300 psig OR as required for present plant conditions as directed by the CRS/SM. [C0417] (2) **IF** present plant conditions permit, THEN PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in AUTO.

Page 24 of 125

Rev: 31

4.3.8 (continued) (3) IF 1CV18, LETDOWN PRESSURE CONTROL VALVE is **NOT** placed in AUTO. THEN UPDATE WCM to reflect position of 1CV18, LETDOWN PRESSURE CONTROL VALVE. **UPDATE** WCM to reflect position of 11CV25, MB DM OUTLET d. VALVE. **INITIATE** a NOTF to investigate high Letdown flow rate. e. 4.3.9. IF placing 12 MIXED BED Demin in service, THEN: 1. ENSURE 11CV24, 11 MB DM INLET VALVE, is closed. 2. **IF** fill and vent is required (Refer to Step 2.1.22), THEN: Slowly **THROTTLE** 12CV25, 12 MIXED BED DEMIN OUTLET a. VALVE 3 turns OPEN. Slowly **OPEN** 12CV234, MB DM VENT for at least 15 minutes, **THEN** b. **CLOSE** valve. 3. Slowly **OPEN** 12CV25, 12 MIXED BED DEMIN OUTLET VALVE. 4. Slowly **OPEN** 12CV24, 12 MIXED BED DEMIN INLET VALVE. 5. PLACE 1CV35, VCT 3 WAY INLET V, in MANUAL/FLOW TO HUT. PLACE 1CV21, LETDOWN DEMIN BYPASS VALVE in FLOW TO MIXED 6. BED position AND PLACE in AUTO.

7.


AND PLACE in AUTO.

WHEN 500-1000 gallons has been flushed through the demineralizer,

[CAPR 70062042]

PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO VCT position

4.3.9 (continued)

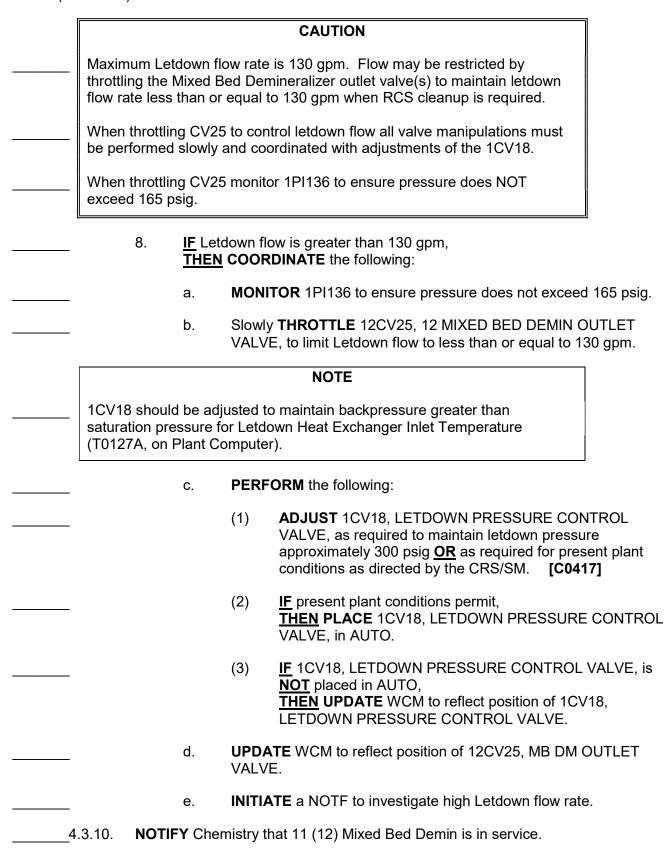

Page 26 of 125 Rev: 31

4.3.11. IF 11 MIXED BED Demin is placed in service, THEN DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section D. 4.3.12. IF 12 MIXED BED Demin is placed in service, THEN DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section E. 4.3.13. UPDATE the following Control Room Console Station Aids, as required. 51-OPA-99-0007, 11 MIXED BED Demineralizer 2. S1-OPA-99-0008, 12 MIXED BED Demineralizer

Page 27 of 125


Rev: 31

4.4 Placing a Borated Mixed Bed Demin In Service With A Mixed Bed Demin In Service (i.e., Swapping Inservice Mixed Bed Demins)

		NOTE
		this procedure is to be used for placing a Standby Mixed Bed ice for RCS chemistry control.
 4.4.1.	OBTA in serv	IN from Chemistry RCS boron concentration when Mixed Bed Demin was last rice.
 4.4.2.	OR CF than 2 last in THEN	ed Bed Demin contains new resin, RS/SM or Chemistry determines present RCS boron concentration is greater 5 ppm different from RCS boron concentration when Mixed Bed Demin was service, TERMINATE performance of this section, PLACE Mixed Bed Demin in service IAW Section 4.1 OR 4.2. [C0417]
 4.4.3.		RE 1CV21, LETDOWN DEMIN BYPASS VALVE in FLOW TO MIXED BED n <u>AND</u> PLACE in AUTO.
 4.4.4.	<u>IF</u> place	sing 11 MIXED BED Demin in service,
	1.	Slowly OPEN 11CV24, 11 MIXED BED DEMIN INLET VALVE.
	2.	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 11CV234, MB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.
	3.	PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT position. [CAPR 70062042]
	4.	Slowly OPEN 11CV25, 11 MIXED BED DEMIN OUTLET VALVE.
	5.	CLOSE 12CV25, MB DM OUTLET VALVE.
	6.	CLOSE 12CV24, MB DM INLET VALVE.
	7.	<u>WHEN</u> 500-1000 gallons has been flushed through the demineralizer, PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO VCT position <u>AND</u> PLACE in AUTO . [CAPR 70062042]

Rev: 31

4.4.4 (continued)

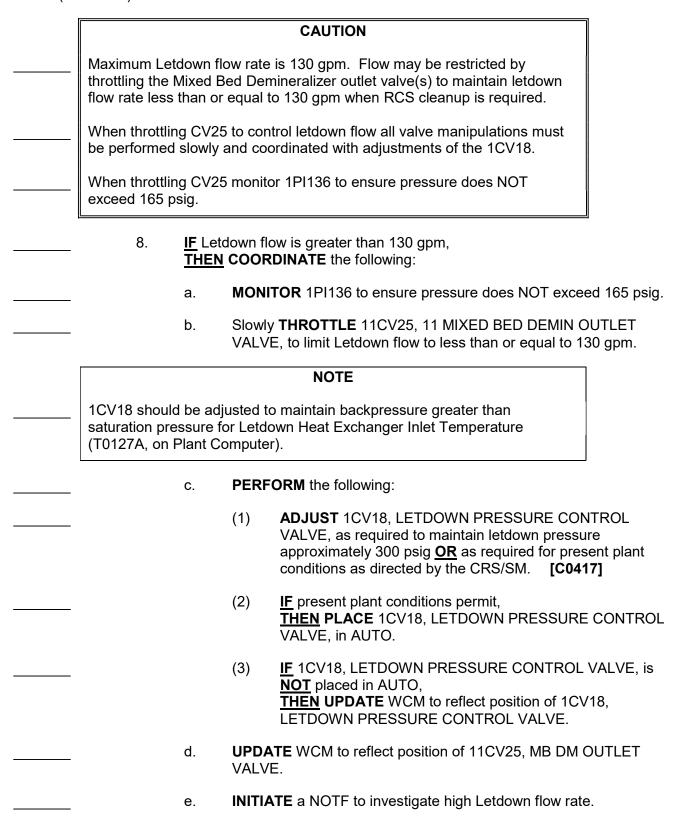

Page 29 of 125 Rev: 31

4.4 (conti	inued)			
4.	_4.4.5. <u>IF</u> placing 12 MIXED BED Demin in service, <u>THEN</u> :			
		1.	Slowly OPEN 12CV24, 12 MIXED BED DEMIN INLET VALVE.	
		2.	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 12CV234, MB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.	
		3.	PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT position.	
		4.	Slowly OPEN 12CV25, 12 MIXED BED DEMIN OUTLET VALVE.	
		5.	CLOSE 11CV25, MB DM OUTLET VALVE.	
		6.	CLOSE 11CV24, 11 MB DM INLET VALVE.	
		7.	<u>WHEN</u> 500-1000 gallons has been flushed through the demineralizer, PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO VCT position <u>AND</u> PLACE in AUTO.	
			CAUTION	
	Maximum Letdown flow rate is 130 gpm. Flow may be restricted by throttling the Mixed Bed Demineralizer outlet valve(s) to maintain letdown flow rate less than or equal to 130 gpm when RCS cleanup is required. When throttling CV25 to control letdown flow all valve manipulations must			
	be performed slowly and coordinated with adjustments of the 1CV18.			
	When throttling CV25 monitor 1PI136 to ensure pressure does NOT exceed 165 psig.			
		8.	<u>IF</u> Letdown flow is greater than 130 gpm, <u>THEN</u> COORDINATE the following:	
			a. MONITOR 1PI136 to ensure pressure does not exceed 165 psig.	
			b. Slowly THROTTLE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE, to limit Letdown flow to less than or equal to 130 gpm.	

Rev: 31

4.4.5 (continued)

NOTE			
 1CV18 should be adjusted to maintain backpressure greater than saturation pressure for Letdown Heat Exchanger Inlet Temperature (T0127A, on Plant Computer).			
 C.	PERFORM the following:		
	(1) ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as required to maintain letdown pressure approximately 300 psig <u>OR</u> as required for present plant conditions as directed by the CRS/SM. [C0417]		
	(2) <u>IF</u> present plant conditions permit, <u>THEN</u> PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in AUTO.		
	(3) <u>IF</u> 1CV18, LETDOWN PRESSURE CONTROL VALVE, is <u>NOT</u> placed in AUTO, <u>THEN</u> UPDATE WCM to reflect position of 1CV18, LETDOWN PRESSURE CONTROL VALVE.		
 d.	UPDATE WCM to reflect position of 12CV25, MB DM OUTLET VALVE.		
 e.	INITIATE a NOTF to investigate high Letdown flow rate.		
 f.	NOTIFY Chemistry that 11 (12) Mixed Bed Demin is in service.		
 g.	<u>IF</u> 11 MIXED BED Demin is placed in service, <u>THEN</u> DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section D.		
 h.	<u>IF</u> 12 MIXED BED Demin is placed in service, <u>THEN</u> DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section E.		
 i.	UPDATE the following Control Room Console Station Aids, as required.		
	(1) S1-OPA-99-0007, 11 MIXED BED Demineralizer		
	(2) S1-OPA-99-0008, 12 MIXED BED Demineralizer		

Page 31 of 125

Rev: 31

4.5 Placing a Borated Standby Mixed Bed Demin In Service for RCS Chemistry Control 4.5.1. **OBTAIN** from Chemistry RCS boron concentration when Standby Mixed Bed Demin was last in service. 4.5.2. IF Standby Mixed Bed Demin contains new resin **OR** the CRS/SM or Chemistry determines present RCS boron concentration is greater than 25 ppm different from RCS boron concentration when Standby Mixed Bed Demin was last in service, **THEN** TERMINATE performance of this section. AND PLACE Standby Mixed Bed Demin in service IAW Section 4.2. [C0417] 4.5.3. **RECORD** the amount of gallons to be flushed through the Mixed Bed Demin (as determined by Chemistry): Gallons 4.5.4. **DETERMINE** amount of time Mixed Bed Demin is to remain in service using gallons recorded in Step 4.5.3 and Letdown flow AND RECORD below: — gallons ENSURE 1CV21. LETDOWN DEMIN BYPASS VALVE in FLOW TO MIXED BED. 4.5.5. position **AND PLACE** in AUTO. 4.5.6. ENSURE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO VCT position AND **PLACE** in AUTO. 4.5.7. **IF** placing 11 MIXED BED Demin in service, THEN: Slowly **OPEN** 11CV24, 11 MIXED BED DEMIN INLET VALVE. 1. 2. Slowly **OPEN** 11CV25, 11 MIXED BED DEMIN OUTLET VALVE. 3. **CLOSE** 12CV25, 12 MIXED BED DEMIN OUTLET VALVE. 4. **CLOSE** 12CV24, 12 MIXED BED DEMIN INLET VALVE. 4.5.8. IF placing 12 MIXED BED Demin in service, THEN: Slowly **OPEN** 12CV24, 12 MIXED BED DEMIN INLET VALVE. 1. 2. Slowly **OPEN** 12CV25, 12 MIXED BED DEMIN OUTLET VALVE. 3. CLOSE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE. 4. CLOSE 11CV24, 11 MIXED BED DEMIN INLET VALVE.

Page 32 of 125 Rev: 31

4.5 (continued)					
4.5.9.	9. WHEN the Standby Mixed Bed Demin has been in service for the time recorde Step 4.5.4,				
	THEN	N REMOVE Mixed Bed Demin from service as follows:			
	1.	<u>IF</u> removing 11 MIXED BED Demin from service, <u>THEN</u> :			
		a.	Slowly OPEN 12CV24, 12 MIXED BED DEMIN INLET VALVE.		
		b.	Slowly OPEN 12CV25, 12 MIXED BED DEMIN OUTLET VALVE.		
		C.	CLOSE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE.		
		d.	CLOSE 11CV24, 11 MIXED BED DEMIN INLET VALVE.		
	2.	<u>IF</u> ren <u>THEN</u>	noving 12 MIXED BED Demin from service, <u>I</u> :		
		a.	Slowly OPEN 11CV24, 11 MIXED BED DEMIN INLET VALVE.		
		b.	Slowly OPEN 11CV25, 11 MIXED BED DEMIN OUTLET VALVE.		
		C.	CLOSE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE.		
		d.	CLOSE 12CV24, 12 MIXED BED DEMIN INLET VALVE.		
4.5.10.					
4.5.11. UPDATE the following Control Room Console Station Aids, as require			following Control Room Console Station Aids, as required.		
	•	S1-OI	PA-99-0007, 11 MIXED BED Demineralizer		
	•	S1-OI	PA-99-0008, 12 MIXED BED Demineralizer		

Page 33 of 125 Rev: 31

4.6	Removi	ing CVCS Demin Header from Service				
	4.6.1.	PLACE 1CV21, LETDOWN DEMIN BYPASS VALVE in FLOW TO VCT position.				
	4.6.2.	<u>IF</u> 11 MIXED BED Demin is to be removed from service, <u>THEN</u> :				
		1. CLOSE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE.				
		2. CLOSE 11CV24, 11 MIXED BED DEMIN INLET VALVE.				
	4.6.3.	<u>IF</u> 12 MIXED BED Demin is to be removed from service, <u>THEN</u> :				
		1. CLOSE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE.				
		2. CLOSE 12CV24, 12 MIXED BED DEMIN INLET VALVE.				
—— -	4.6.4. V	DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section G.				
	4.6.5.	NOTIFY Chemistry that CVCS Demins are removed from service AND to EVALUATE whether RCS chemistry will support removing the Reactor Coolant Filter from service.				
	4.6.6.	<u>IF</u> Chemistry determines that RCS chemistry can support removing Reactor Coolant Filter from service, <u>THEN</u> REMOVE Reactor Coolant Filter from service IAW S1.OP-SO.CVC-0001(Q), Charging, Letdown, and Seal Injection.				
	4.6.7.	UPDATE the following Control Room Console Station Aids, as required.				
		1. S1-OPA-99-0007, 11 MIXED BED Demineralizer				
		2. S1-OPA-99-0008, 12 MIXED BED Demineralizer				

Page 34 of 125 Rev: 31

4.7 Placing a Non Borated Cation Bed Demin (with Mixed Resin) In Service 4.7.1. **OBTAIN** current RCS boron concentration from Chemistry, **AND RECORD** on Attachment 3, CVCS Demin Borating Record. 4.7.2. **ENSURE** a Mixed Bed Demin is in service. 4.7.3. **IF** placing a demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, THEN COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill Valve Position Verification. [CRCA 70108974] 4.7.4. **ADJUST** Letdown to 45 gpm by performing the following: 1. **IF** Normal Letdown is in service, THEN: a. PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE in MANUAL. Simultaneously **PERFORM** the following: b. (1) **OPEN 1CV3, LETDOWN ORIFICE ISOLATION VALVE, 45** GPM ORIFICE ISOLATION VALVE. ADJUST 1CV18, LETDOWN PRESSURE CONTROL (2) VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). NOTE The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature. **IF** controlling Letdown pressure in AUTO, C. (1) **PLACE 1CV18 in AUTO** (2) **CLOSE** 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.

Page 35 of 125 Rev: 31

4.7.4 (cont	inued)			
		d.		ntrolling Letdown pressure in Manual, simultaneously ORM the following:
			(1)	CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.
			(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
		e.	ADJU	ST Charging flow as necessary to match Letdown flow.
		f.		<u>N</u> Letdown pressure is at approximately 300 psig, ENSURE 8 in AUTO.
	2. <u>IF</u> Letdown is from RHR, <u>THEN</u> :			from RHR,
		a.		OTTLE 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown of 45 GPM.
		b.	ADJU	ST Charging flow as necessary to match Letdown flow.
				NOTE
	When borati makeup cap			demin, letdown flow should be less than
4.7	.5. PLA 0	CE 1CV	35, VCT	THREE WAY INLET VALVE in FLOW TO HUT position.
4.7	.6. Slow	ly OPEN	I 1CV22	24, 1 CATION BED DEMIN INLET VALVE.
4.7	THE		OPEN	uired (Refer to Step 2.1.22), 1CV226, CATION DM VENT for at least 2 minutes, <u>THEN</u>
4.7	.8. Slow	ly OPEN	I 1CV22	25, 1 CATION BED DEMIN OUTLET VALVE.
Γ				NOTE
		_		vill rise through the Cation Bed Demin. on Bed Demin is 75 gpm.
4.7	.9. Slow	ly CLO S	SE 1CV2	26, CATION BED BYPASS VALVE.

Page 36 of 125

Rev: 31

4.7 (continued)				
4.7.10.	<u>IF</u> Cation Bed Demin to be borated contains new Mixed Resin, <u>THEN</u> :			
	RECORD time on Attachment 3, CVCS Demin Borating Record.			
	2. DETERMINE approximate amount of time required to saturate Cation Bo Demin with boron IAW Attachment 2, Time Required To Saturate Cation Demin (IF Mixed Resin USED).			
	3.	WHEI proce	<u>N</u> required amount of time has elapsed, CONTINUE with this dure.	
4.7.11.	ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling.			
4.7.12.	RECORD results of sample on Attachment 3, CVCS Demin Borating Record.			
4.7.13.	<u>IF</u> difference in boron concentration is greater than 25 ppm, <u>THEN</u> :			
	 ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less). 			
	 RECORD results of samples on Attachment 3, CVCS Demin Borating Record. 			
	3.		difference in boron concentration is less than or equal to 25 ppm, INUE with this procedure.	
4.7.14.	OPEN 1CV26, CATION BED BYPASS VALVE.			
4.7.15.	PLACE 1CV35, VCT 3 WAY V, in FLOW TO VCT position AND PLACE in AUTO.			
4.7.16.	<u>IF</u> Normal Letdown is in service, <u>THEN</u> :			
	1.	PLAC	E 1CV18, LETDOWN PRESSURE CONTROL VALVE, in MANUAL.	
	2.	Simul	taneously PERFORM the following:	
		a.	OPEN 1CV4, LETDOWN ORIFICE ISOLATION VALVE, <u>OR</u> 1CV5, LETDOWN ORIFICE ISOLATION VLV.	
		b.	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).	

Page 37 of 125

Rev: 31

4.7.16 (continued)

		NOTE							
	The print in AUT orifice lower psig is outlet expec								
		3. <u>IF</u> controlling Letdown pressure in AUTO,							
			a.	PLACE 1CV18 in AUTO					
			b.	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.					
		4.	<u>IF</u> con followi	trolling Letdown pressure in Manual, simultaneously PE ing:	RFORM the				
			a.	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.					
			b.	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, to maintain Letdown pressure for current plant condition (approximately 300 psig @ NOP).					
		5.	ADJU	ST Charging flow as necessary to match Letdown flow.					
		6.	WHEN AUTO	<u>I</u> Letdown pressure is at approximately 300 psig, ENSU I	RE 1CV18 in				
4	.7.17.	THRO on FL-		CLOSE 1CV26, CATION BED BYPASS VALVE to obtain	desired flow				
4	.7.18.	<u>IF</u> Leto		from RHR,					
		1.	ADJU	ST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired	l letdown flow.				
		2.	ADJU	ST Charging flow as necessary to match Letdown flow.					
4	.7.19.	NOTIF	Y Cher	mistry that the Cation Bed Demin is in service.					

Page 38 of 125 Rev: 31

4.7 (continued)						
4.7.20.	IF the Cation Bed Demin was placed in service for RCS chemistry control from Section 4.9, THEN :					
	1.		RMINE amount of time Cation Bed Demin is to remain in service using service recorded in Step 4.9.3 and flow on FL-8864 AND RECORD below:			
			gallons ÷ <u>gallons</u> = minutes			
	2.		N the Cation Bed Demin has been in service for the time recorded in 4.7.20A, REMOVE Cation Bed Demin from service as follows:			
		a.	OPEN 1CV26, CATION BED BYPASS VALVE.			
		b.	CLOSE 1CV225, 1 CATION BED OUTLET VALVE.			
		C.	CLOSE 1CV224, 1 CATION BED INLET VALVE.			
	3.	NOTI	FY Chemistry that the Cation Bed Demin is removed from service.			
4.7.21.			cond Operator to perform Independent Verification IAW Attachment 7, Verification Section H.			
4.7.22.		ATE Con neralize	ntrol Room Console Station Aid S1-OPA-99-0011, 1 Cation Bed r.			

Page 39 of 125

Rev: 31

4.8 Placing a Borated Cation Bed Demin (with Mixed Resin) In Service

		NOTE						
	Section 4.9 of this procedure is to be used for placing a Cation Bed Demin in service for RCS chemistry control.							
4.	.8.1.	OBTAIN from Chemistry RCS boron concentration when Cation Bed Demin was last in service.						
4	8.2.	IF Cation Bed Demin contains new resin OR CRS/SM or Chemistry determines present RCS boron concentration is greater than 25 ppm different from RCS boron concentration when Cation Bed Demin was last in service, THEN TERMINATE performance of this section, AND PLACE Cation Bed Demin in service IAW Section 4.7. [C0417]						
4.	.8.3.	ENSURE a Mixed Bed Demin is in service.						
4	.8.4.	Slowly OPEN 1CV224, 1 CATION BED DEMIN INLET VALVE.						
4	.8.5.	 IF fill and vent is required (Refer to Step 2.1.22), THEN slowly OPEN 1CV226, CATION DM VENT for at least 2 minutes, THEN CLOSE valve. 						
4	.8.6.	Slowly OPEN 1CV225, 1 CATION BED DEMIN OUTLET VALVE.						
		NOTE						
	Maxim	num flow through Cation Bed Demin is 75 gpm.						
4.	.8.7.	THROTTLE CLOSE 1CV26, CATION BED BYPASS VALVE to obtain desired flow on FL-8864.						
4.	.8.8.	DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification, Section I.						
4.	.8.9.	NOTIFY Chemistry that the Cation Bed Demin is in service.						
4.8.10. UPDATE Control Room Console Station Aid S1-OPA-99-0011, 1 Cation Bed Demineralizer.								

Page 40 of 125 Rev: 31

4.9 Placing a Borated Cation Bed Demin (with Mixed Resin) In Service for RCS Chemistry Control 4.9.1. **OBTAIN** from Chemistry RCS boron concentration when Cation Bed Demin was last in service. 4.9.2. IF Cation Bed Demin contains new resin **OR** CRS/SM or Chemistry determines present RCS boron concentration is greater than 25 ppm different from RCS boron concentration when Cation Bed Demin was last in service. **THEN TERMINATE** performance of this section, **AND PLACE** Cation Bed Demin in service IAW Section 4.7. [C0417] 4.9.3. **RECORD** the amount of gallons to be flushed through the Cation Bed Demin (as determined by Chemistry): Gallons 4.9.4. **ENSURE** a Mixed Bed Demin is in service. 4.9.5. Slowly **OPEN** 1CV224, 1 CATION BED INLET VALVE. 4.9.6. Slowly **OPEN** 1CV225, 1 CATION BED OUTLET VALVE. **NOTE** Maximum flow through Cation Bed Demin is 75 gpm. 4.9.7. THROTTLE CLOSE 1CV26, CATION BED BYPASS VALVE to obtain desired flow on FL-8864. **DETERMINE** amount of time Cation Bed Demin is to remain in service using gallons 4.9.8. recorded in Step 4.9.3 and flow on FL-8864 AND RECORD below: gallons _____ gallons ——— minutes 4.9.9. WHEN the Cation Bed Demin has been in service for the time recorded in Step 4.9.8, **REMOVE** Cation Bed Demin from service as follows: 1. **OPEN** 1CV26, CATION BED BYPASS VALVE. 2. **CLOSE** 1CV225, 1 CATION BED OUTLET VALVE. 3. **CLOSE** 1CV224, 1 CATION BED INLET VALVE.

Rev: 31

4.9 (continued)	
4.9.10.	DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section J.
4.9.11.	NOTIFY Chemistry that the Cation Bed Demin is removed from service.
4.9.12.	UPDATE Control Room Console Station Aid S1-OPA-99-0011, 1 Cation Bed Demineralizer.

Page 42 of 125

Rev: 31

4.10 Placing a Cation Bed Demin (with Cation Resin) In Service


desired flow on FL-8864.

		NOTE
		, 4.8 or 4.9, as applicable, of this procedure is to be used for ation Bed Demin with mixed bed resin in service.
_4.10.1.	ENS	SURE a Mixed Bed Demin is in service.
_4.10.2.		FAIN from Chemistry RCS boron concentration when Cation Bed Demin was laservice.
4.10.3.	SC.0	lacing a demineralizer in service following resin addition IAW CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill Valve Position fication. [CRCA 70108974]
4.10.4.	boro	CS boron concentration is less than or equal to 25 ppm different from RCS on concentration when Cation Bed Demin was last in service, PERFORM the following:
	1.	Slowly OPEN 1CV224, 1 CATION BED DEMIN INLET VALVE.
	2.	 IF fill and vent is required (Refer to Step 2.1.22), THEN slowly OPEN 1CV226, CATION DM VENT for at least 2 minutes, THEN CLOSE valve.
	3.	Slowly OPEN 1CV225, 1 CATION BED DEMIN OUTLET VALVE.
		NOTE
Maxir	num fl	ow through Cation Bed Demin is 75 gpm.
	4.	THROTTLE CLOSE 1CV26. CATION BED BYPASS VALVE to obtain

Page 43 of 125

Rev: 31

4.10 (continued)

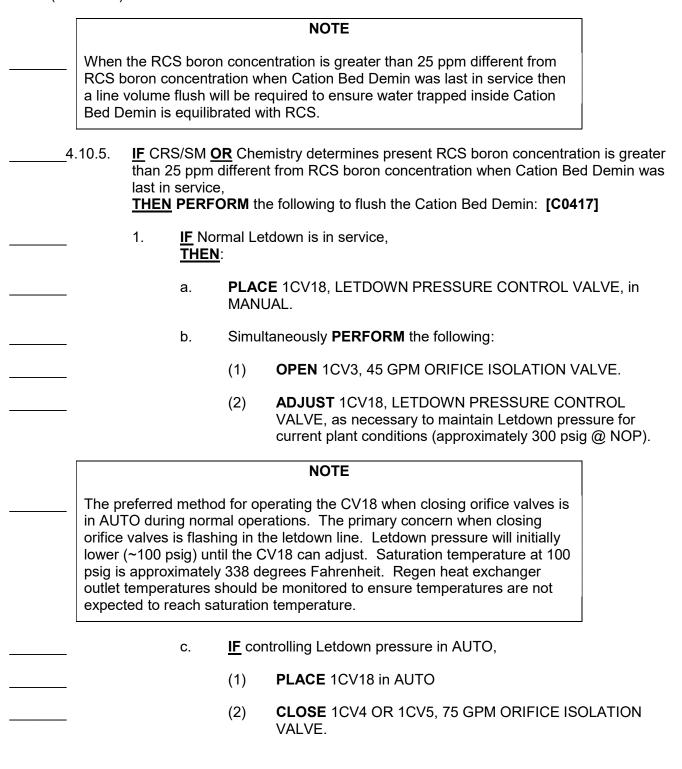

S1.OP-SO.CVC-0012(Q)

Page 44 of 125

CVCS DEMINERALIZER - NORMAL OPERATION Rev: 31 4.10.5.1 (continued) d. **IF** controlling Letdown pressure in Manual, simultaneously **PERFORM** the following: (1) CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE. (2) ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). **ADJUST** Charging flow as necessary to match Letdown flow. e. WHEN Letdown pressure is at approximately 300 psig, ENSURE f. 1CV18 in AUTO. 2. **IF** Letdown is from RHR, THEN: THROTTLE 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown a. flow to 45 GPM. b. **ADJUST** Charging flow as necessary to match Letdown flow. NOTE When borating a cation bed demin, letdown flow should be less than makeup capacity to VCT. 3. PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT position. 4. Slowly **OPEN** 1CV224, 1 CATION BED DEMIN INLET VALVE. **IF** fill and vent is required (Refer to Step 2.1.22), 5. THEN slowly OPEN 1CV226, CATION DM VENT for at least 2 minutes. THEN CLOSE valve. 6. Slowly **OPEN** 1CV225, 1 CATION BED DEMIN OUTLET VALVE.

NOTE When closing 1CV26, flow will rise through the Cation Bed Demin. Maximum flow through Cation Bed Demin is 75 gpm.

- 7. Slowly **THROTTLE** CLOSE 1CV26, CATION BED BYPASS VALVE.
- 8. **WHEN** 500 gallons have been flushed through the Cation Bed Demin, **ESTABLISH** Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling.

Page 45 of 125 Rev: 31

4.5 (continued) 9. **RECORD** results of sample on Attachment 3, CVCS Demin Borating Record. 10. **IF** difference in boron concentration is greater than 25 ppm, THEN: **ESTABLISH** Alternate Letdown Sampling Backpressure Method IAW a. Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less). b. **RECORD** results of samples on Attachment 3, CVCS Demin Borating Record. WHEN difference in boron concentration is less than or equal to 25 C. ppm, **CONTINUE** with this procedure. 11. **OPEN** 1CV26, CATION BED BYPASS VALVE. PLACE 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position AND 12. **PLACE** in AUTO. 13. IF Normal Letdown is in service, THEN: PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in a. MANUAL. b. Simultaneously **PERFORM** the following: **OPEN 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION** (1) VALVE. (2) ADJUST 1CV18. LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). NOTE The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature. **IF** controlling Letdown pressure in AUTO, C. (1) PLACE 1CV18 in AUTO

(2)

CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.

Rev: 31

4.5.13 (continue	ed)						
		d.		ntrolling Letdov ORM the follo	•	in Manual, sim	nultaneously
			(1)	CLOSE 1CV	3, 45 GPM (ORIFICE ISOL	ATION VALVE.
			(2)	necessary to	maintain Le		RE CONTROL, as re for current plant NOP).
		e.	ADJU	IST Charging f	low as nece	ssary to match	Letdown flow.
		f.		<u>N</u> Letdown pre 8 in AUTO.	ssure is at a	pproximately 3	300 psig, ENSURE
	14.			CLOSE 1CV26 on FL-8864.	, CATION B	SED BYPASS \	VALVE to obtain
	15.	<u>IF</u> Let <u>THEN</u>		from RHR,			
		a.		IST 1CV8, LET vn flow.	DOWN ISC	L FOR RHR, t	o obtain desired
		b.	ADJU	IST Charging f	low as nece	ssary to match	Letdown flow.
4.10.6.	NOTI	FY Che	mistry tl	hat the Cation	Bed Demin	is in service.	
4.10.7.		on 4.11,		emin was place	ed in service	for RCS chem	nistry control from
	1.						remain in service using AND RECORD below:
			gallons	÷	_ gallons minute	=	— minutes
	2.		_	ation Bed Dem , REMOVE Ca			the time recorded in ice as follows:
		a.	OPEN	I 1CV26, CATI	ON BED BY	PASS VALVE	
		b.	CLOS	SE 1CV225, 1 (CATION BE	D OUTLET VA	ALVE.
		C.	CLOS	SE 1CV224, 1 (CATION BE	D INLET VALV	/E.
	3.	NOTI	FY Che	mistry that the	Cation Bed	Demin is remo	oved from service.

Page 47 of 125 Rev: 31

4.10 (continued)	
4.10.8.	DIRECT a second Operator to perform Independent Verification IAW Attachment 7 Independent Verification Section K.

4.10.9. **UPDATE** Control Room Console Station Aid S1-OPA-99-0011, 1 Cation Bed Demineralizer.

Page 48 of 125

Rev: 31

4.11 Placing a Cation Bed Demin (with Cation Resin) In Service for RCS Chemistry Control

	NOTE	
	cing Cation Bed Demin with mixed bed resin in service then place in the IAW Sections 4.7, 4.8 or 4.9, as applicable.	
.11.1.	RECORD the amount of gallons to be flushed through the Cation Bed determined by Chemistry):	Demin (as
		Gallons
4.11.2.	OBTAIN from Chemistry RCS boron concentration when Cation Bed in service.	Demin was last
	NOTE	
boron volum	RCS boron concentration is greater than 25 ppm different from RCS concentration when Cation Bed Demin was last in service then a line le flush will be required to ensure water trapped inside Cation Bed is equilibrated with RCS.	
.11.3.	IF CRS/SM OR Chemistry determines present RCS boron concentrate than 25 ppm different from RCS boron concentration when Cation Be last in service, THEN TERMINATE performance of this section, AND PLACE Cation service IAW Section 4.10. [C0417]	d Demin was
.11.4.	<u>IF</u> placing a demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, <u>THEN</u> COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill \ Verification. [CRCA 70108974]	/alve Position
.11.5.	ENSURE a Mixed Bed Demin is in service.	
1.11.6.	Slowly OPEN 1CV224, 1 CATION BED INLET VALVE.	
4.11.7.	Slowly OPEN 1CV225, 1 CATION BED OUTLET VALVE.	
	NOTE	
Maxin	num flow through Cation Bed Demin is 75 gpm.	
.11.8.	THROTTLE CLOSE 1CV26, CATION BED BYPASS VALVE to obtain on FL-8864.	n desired flow

Page 49 of 125 Rev: 31


4.11 (continued)	
4.11.9.	DETERMINE amount of time Cation Bed Demin is to remain in service using gallons recorded in Step 4.11.1 and flow on FL-8864 AND RECORD below:
4.11.10.	WHEN the Cation Bed Demin has been in service for the time recorded in Step 4.11.9, REMOVE it from service as follows:
	1. OPEN 1CV26, CATION BED BYPASS VALVE.
	2. CLOSE 1CV225, 1 CATION BED OUTLET VALVE.
	3. CLOSE 1CV224, 1 CATION BED INLET VALVE.
4.11.11.	DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section L.
4.11.12.	NOTIFY Chemistry that the Cation Bed Demin is removed from service.
4.11.13.	UPDATE Control Room Console Station Aid S1-OPA-99-0011, 1 Cation Bed Demineralizer.

Page 50 of 125 Rev: 31

4.12 **Removing the Cation Bed Demin from Service** 4.12.1. **OPEN** 1CV26, CATION BED BYPASS VALVE. **CLOSE** 1CV225, 1 CATION BED OUTLET VALVE. 4.12.2. CLOSE 1CV224, 1 CATION BED INLET VALVE. 4.12.3. **DIRECT** a second Operator to perform Independent Verification IAW Attachment 7, 4.12.4. IV Independent Verification Section M. **NOTIFY** Chemistry that the Cation Bed Demin is removed from service. 4.12.5. UPDATE Control Room Console Station Aid S1-OPA-99-0011, 1 Cation Bed 4.12.6. Demineralizer.

Rev: 31

4.13 Placing a Deborating Bed Demin In Service (Mixed Bed Demin Available)

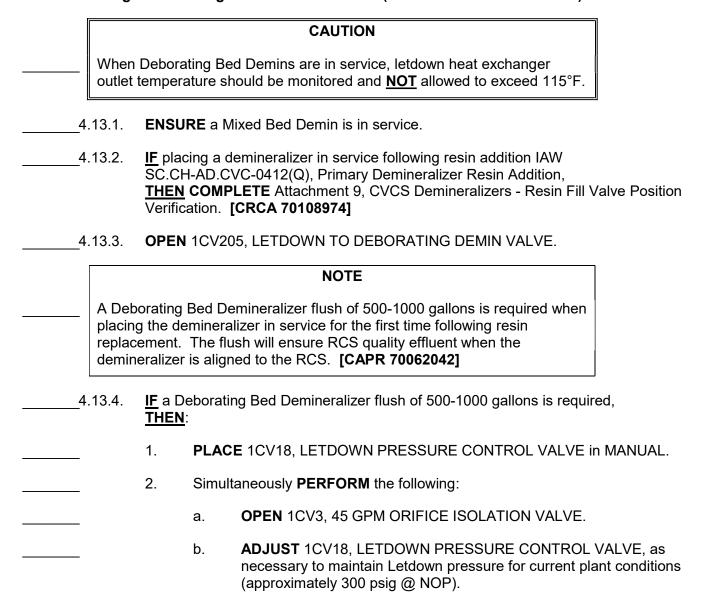

Page 52 of 125

Rev: 31

4.13.4 (continued)

			NOTE				
in a ori lov psi ou	The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature.						
		3.	<u>IF</u> controlling Letdown pressure in AUTO,				
			a. PLACE 1CV18 in AUTO				
			b. CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.				
		4.	$\underline{\textbf{IF}}$ controlling Letdown pressure in Manual, simultaneously $\textbf{PERFORM}$ the following:				
			a. CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.				
			b. ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).				
		5.	ADJUST Charging flow as necessary to match Letdown flow.				
		6.	<u>WHEN</u> Letdown pressure is at approximately 300 psig, ENSURE 1CV18 in AUTO.				
		7.	PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT position.				
4.13.		<u>IF</u> 11 [THEN:	DEBORATING Demin is to be placed in service,				
		1.	ENSURE OPEN 11CV208, 11 DEBORATING DEMIN INLET VALVE.				
		2.	ENSURE OPEN 11CV210, 11 DEBORATING DEMIN OUTLET VALVE.				
		3.	Slowly OPEN 11CV206, 11 DEBORATING DEMIN INLET VALVE.				
		4.	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 11CV215, DB DM VENT for at least 2 minutes, <u>THEN</u> <u>CLOSE</u> valve.				
		5.	OPEN 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.				

S1.OP-SO.CVC-0012(Q)

Page 53 of 125

Rev: 31

CVCS DEMINERALIZER - NORMAL OPERATION

4.13 (continued)					
4.13.6.	<u>IF</u> 12 DEBORATING Demin is to be placed in service, <u>THEN</u> :				
	1. ENSURE OPEN 12CV208, 12 DEBORATING DEMIN INLET VALVE.				
	2. ENSURE OPEN 12CV210, 12 DEBORATING DEMIN OUTLET VALVE.				
	3. Slowly OPEN 12CV206, 12 DEBORATING DEMIN INLET VALVE.				
	4. <u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 12CV215, DB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.				
	5. OPEN 12CV209, 12 DEBORATING DEMIN OUTLET VALVE.				
4.13.7.	OPEN 1CV212, DEBORATING DEMIN OUTLET VALVE.				
4.13.8.	<u>IF</u> 21 Deborating Demin is placed in service, <u>THEN</u> DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Section N.				
4.13.9.	<u>IF</u> 22 Deborating Demin is placed in service, <u>THEN</u> DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Section O.				
4.13.10.	PLACE 1CV27, DEBORATING DEMIN THREE WAY INLET VALVE in FLOW TO DB BED position.				
4.13.11.	CLOSE 1CV205, LETDOWN TO DEBORATING DEMIN VALVE.				
4.13.12.	DIRECT second operator to perform Independent Verification of 1CV205, Letdown to Deborating Demin Valve, IAW Attachment 7, Section P. [CRCA 70174717-0030]				
4.13.13.	<u>IF</u> a Deborating Bed Demineralizer flush of 500-1000 gallons is in progress <u>AND</u> 500-1000 gallons has been flushed through the demineralizer <u>THEN</u> :				
	 PLACE 1CV27, DEBORATING DEMIN THREE WAY INLET VALVE in FLOW TO VCT position. 				
	 PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO VCT position <u>AND</u> PLACE in AUTO. 				
	3. PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE in MANUAL.				

Page 54 of 125

Rev: 31

4.13.13 (continued) 4. Simultaneously **PERFORM** the following: **OPEN** 1CV4, ORIFICE ISOLATION VALVE, **OR** 1CV5, 75 GPM a. ORIFICE ISOLATION VALVE. ADJUST 1CV18, LETDOWN PRESSURE CONTROL VAVLE, as b. necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). NOTE The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature. IF controlling Letdown pressure in AUTO, 5. PLACE 1CV18 in AUTO a. **CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.** b. IF controlling Letdown pressure in Manual, simultaneously PERFORM the 6. following: **CLOSE** 1CV3, 45 GPM ORIFICE ISOLATION VALVE. a. b. ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP). 7. **ADJUST** Charging flow as necessary to match Letdown flow. WHEN Letdown pressure is at approximately 300 psig, ENSURE 1CV18 in 8. AUTO. 4.13.14. **INITIATE** Attachment 4, Deborating Bed Demineralizer Usage. 4.13.15. CYCLE 1CV27, DEBORATING DEMIN 3-WAY INLET V, as required for RCS reactivity control. 4.13.16. **IF** DEBORATING Demin is no longer needed for reactivity control, **THEN PERFORM** section 4.17

Page 55 of 125

Rev: 31

4.14 Placing a Deborating Bed Demin (with Cation Bed Resin) In Service for RCS Chemistry Control (Mixed Bed Demin Available)


				NOTE			
	Pressu letdow	ure (NO n is in s	P) and	ds be in service when RCS is at Normal Operating Normal Operating Temperature (NOT) AND minimum otherwise charging flow will be too low to cool letdown r.			
4	.14.1.			amount of gallons to be flushed through the Deborating d by Chemistry):	Bed Demin		
					Gallons		
4	.14.2.	ENSU	RE a M	ixed Bed Demin is in service.			
4	.14.3.	SC.CH	H-AD.C\ COMP	emineralizer in service following resin addition IAW /C-0412(Q), Primary Demineralizer Resin Addition, LETE Attachment 9, CVCS Demineralizers - Resin Fill V CRCA 70108974]	/alve Position		
4	.14.4.	OPEN	1CV20	5, LETDOWN TO DEBORATING DEMIN VALVE.			
4	.14.5.		IN from st in se	Chemistry RCS boron concentration when Deborating I	3ed Demin		
4	.14.6.	I.6. IF RCS boron concentration is less than or equal to 25 ppm different from RCS boron concentration when Deborating Bed Demin was last in service, THEN PERFORM the following:					
		1.	<u>IF</u> 11 [<u>THEN</u> :	DEBORATING Demin is to be placed in service,			
			a.	ENSURE OPEN 11CV208, 11 DEBORATING DEMIN	NLET VALVE		
			b.	ENSURE OPEN 11CV210, 11 DEBORATING DEMIN OVALVE.	OUTLET		
			C.	Slowly OPEN 11CV206, 11 DEBORATING DEMIN INL	ET VALVE.		
			d.	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 11CV215, DB DM VENT for at lea <u>THEN</u> CLOSE valve.	st 2 minutes,		
			e.	OPEN 11CV209, 11 DEBORATING DEMIN OUTLET \	/ALVE.		

Page 56 of 125 Rev: 31

4.14.6 (co	ntinued)			
		2.	<u>IF</u> 12 I		ATING Demin is to be placed in service,
			a.	ENSU	RE OPEN 12CV208, 12 DEBORATING DEMIN INLET VALVE.
			b.	ENSU VALVI	RE OPEN 12CV210, 12 DEBORATING DEMIN OUTLET E.
			C.	Slowly	OPEN 12CV206, 12 DEBORATING DEMIN INLET VALVE.
			d.	THEN	and vent is required (Refer to Step 2.1.22), slowly OPEN 12CV215, DB DM VENT for at least 2 minutes, CLOSE valve.
			e.	OPEN	12CV209, 12 DEBORATING DEMIN OUTLET VALVE.
		3.	OPEN	1CV21	2, DEBORATING DEMIN OUTLET VALVE.
		4.			27, DEBORATING DEMIN THREE WAY INLET VALVE in BED position.
		5.	CLOS	E 1CV2	205, LTDWN TO DB VALVE.
					NOTE
	When RCS boron concentration is greater than 25 ppm different from RCS boron concentration when Deborating Bed Demin was last in service then a line volume flush will be required to ensure water trapped inside Deborating Bed Demin is equilibrated with RCS.				
4.′		 greate Demin	r than 2 was la	25 ppm st in se	Chemistry determines present RCS boron concentration is different from RCS boron concentration when Deborating Bed rvice, e following to flush the Deborating Bed Demin:
		1.	<u>IF</u> Nor <u>THEN</u>		down is in service,
			a.	PLAC MANU	E 1CV18, LETDOWN PRESSURE CONTROL VALVE in IAL.
			b.	Simult	aneously PERFORM the following:
				(1)	OPEN 1CV3, 45 GPM ORIFICE ISOLATION VALVE.
				(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).

Rev: 31

4.14.7 (continued)

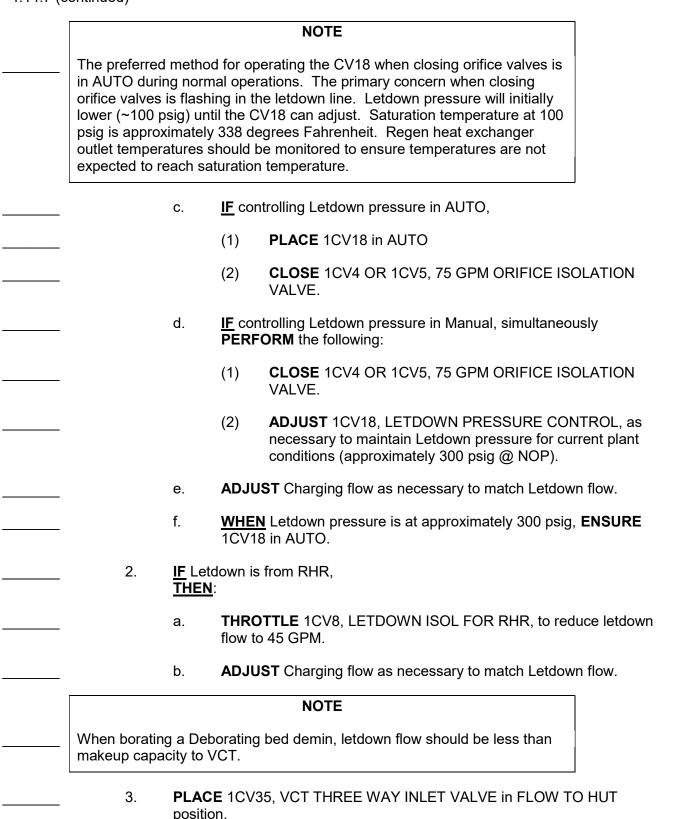

Page 58 of 125 Rev: 31

4.14.7 (continued) 4. **IF** 11 DEBORATING Demin is to be flushed, THEN: ENSURE OPEN 11CV208, 11 DEBORATING DEMIN INLET VALVE. a. ENSURE OPEN 11CV210, 11 DEBORATING DEMIN OUTLET b. VALVE. Slowly **OPEN** 11CV206, 11 DEBORATING DEMIN INLET VALVE. C. d. **IF** fill and vent is required (Refer to Step 2.1.22), THEN slowly OPEN 11CV215, DB DM VENT for at least 2 minutes, THEN CLOSE valve. **OPEN** 11CV209, 11 DEBORATING DEMIN OUTLET VALVE. e. 5. **IF** 12 DEBORATING Demin is to be flushed, THEN: a. ENSURE OPEN 12CV208, 12 DEBORATING DEMIN INLET VALVE. **ENSURE** OPEN 12CV210, 12 DEBORATING DEMIN OUTLET b. VALVE. Slowly **OPEN** 12CV206, 12 DEBORATING DEMIN INLET VALVE. C. d. **IF** fill and vent is required (Refer to Step 2.1.22), THEN slowly OPEN 12CV215, DB DM VENT for at least 2 minutes. THEN CLOSE valve. **OPEN** 12CV209, 12 DEBORATING DEMIN OUTLET VALVE. e. 6. **OPEN 1CV212, DEBORATING DEMIN OUTLET VALVE.** 7. IF 11 Deborating Demin is placed in service, IV THEN DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Section N. 8. **IF** 12 Deborating Demin is placed in service, IV THEN DIRECT a second Operator to perform Independent Verification IAW Attachmet 7, Section O. 9. PLACE 1CV27, DEBORATING DEMIN THREE WAY INLET VALVE in FLOW TO DB BED position. 10. CLOSE 1CV205, LTDWN TO DB DM VALVE. DIRECT second operator to PERFORM Independent Verification of 1CV205, 11. IV Letdown to Deborating Demin Valve IAW Attachment 7, Section P. [CRCA 70174717-0030]


Page 59 of 125 Rev: 31

4.14.7 (continued) 12. **IF** at any time, satisfactory sample results cannot be obtained, **OR** Terminsation of flush is sesired, THEN, **PLACE** 1CV27 int the flow to VCT position. a. b. **GOTO** step 4.14.7.15 13. WHEN 500 gallons have been flushed through the Cation Bed Demin, **ESTABLISH** Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling. **RECORD** results of sample on Attachment 3, CVCS Demin Borating Record. 14. 15. **IF** difference in boron concentration is greater than 25 ppm, THEN: **ESTABLISH** Alternate Letdown Sampling Backpressure Method IAW a. Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less). **RECORD** results of samples on Attachment 3, CVCS Demin Borating b. Record. WHEN difference in boron concentration is less than or equal to 25 C. ppm, **CONTINUE** with this procedure. 16. PLACE 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position AND PLACE in AUTO. 17. IF Normal Letdown is in service, THEN: a. PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in MANUAL. b. Simultaneously **PERFORM** the following: (1) OPEN 1CV4LETDOWN ORIFICE ISOLATION VALVE, OR 1CV5, LETDOWN ORIFICE ISOLATION VALVE. (2) **ADJUST** 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).

4 14 7	(continue	(be
1. 1 1.7	(OOI I LII I G	<i></i>

		NOTE
in AUTO during orifice valves is lower (~100 psig psig is approxim	normal opera flashing in th g) until the C' nately 338 de ures should b	erating the CV18 when closing orifice valves is ations. The primary concern when closing he letdown line. Letdown pressure will initially V18 can adjust. Saturation temperature at 100 egrees Fahrenheit. Regen heat exchanger be monitored to ensure temperatures are not a temperature.
с	. <u>IF</u> con	trolling Letdown pressure in AUTO,
<u> </u>	(1)	PLACE 1CV18 in AUTO
_	(2)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.
d		trolling Letdown pressure in Manual, simultaneously ORM the following:
	(1)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.
	(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
е	e. ADJU	ST Charging flow as necessary to match Letdown flow.
f.		Letdown pressure is at approximately 300 psig, ENSURE in AUTO.
	<u>F</u> Letdown is <u>'HEN</u> :	from RHR,
_ a		ST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired /n flow.
b	. ADJU	ST Charging flow as necessary to match Letdown flow.
		t of time Deborating Bed Demin is to remain in service using step 4.14.1 and Letdown flow AND RECORD below:
	gallons	\div gallons = minutes
4.14.8, <u>THEN</u> P		ng Bed Demin has been in service for the time recorded in Step 7, DEBORATING DEMIN THREE WAY INLET VALVE, in

Page 61 of 125

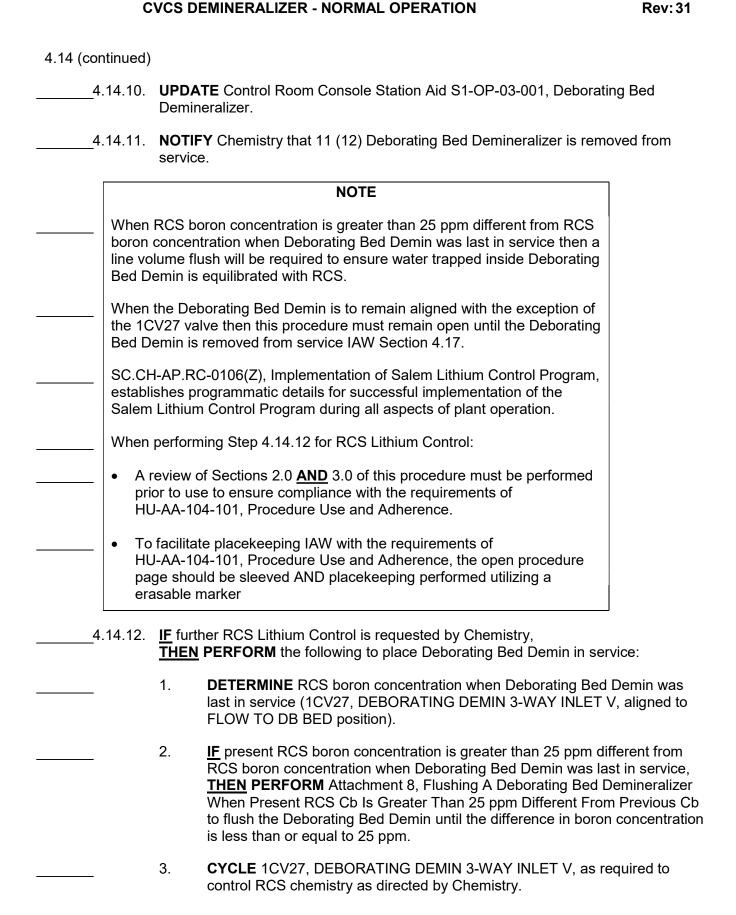

from service.

4.14.12 (continued)
4. UPDATE Control Room Console Station Aid S1-OP-03-001, Deborating Bed Demineralizer.
5. NOTIFY Chemistry that 11 (12) Deborating Bed Demineralizer is removed


Page 62 of 125


Rev: 31

4.14.13. <u>WHEN</u> Deborating Bed Demin operation is no longer required, **REMOVE** Deborating Bed Demin from service IAW Section 4.17.

Rev: 31

4.15 Placing a Deborating Bed Demin (with Mixed Bed or Cation Bed Resin) In Service With No Mixed Bed Demin Available

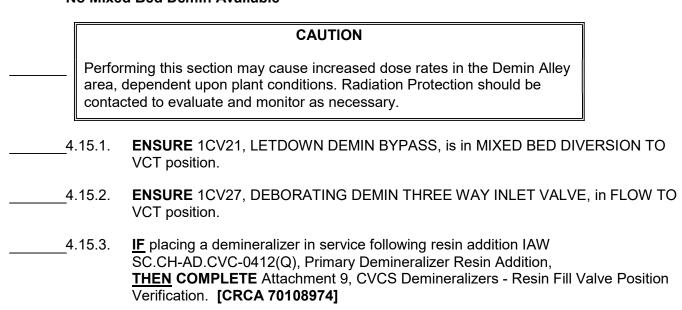

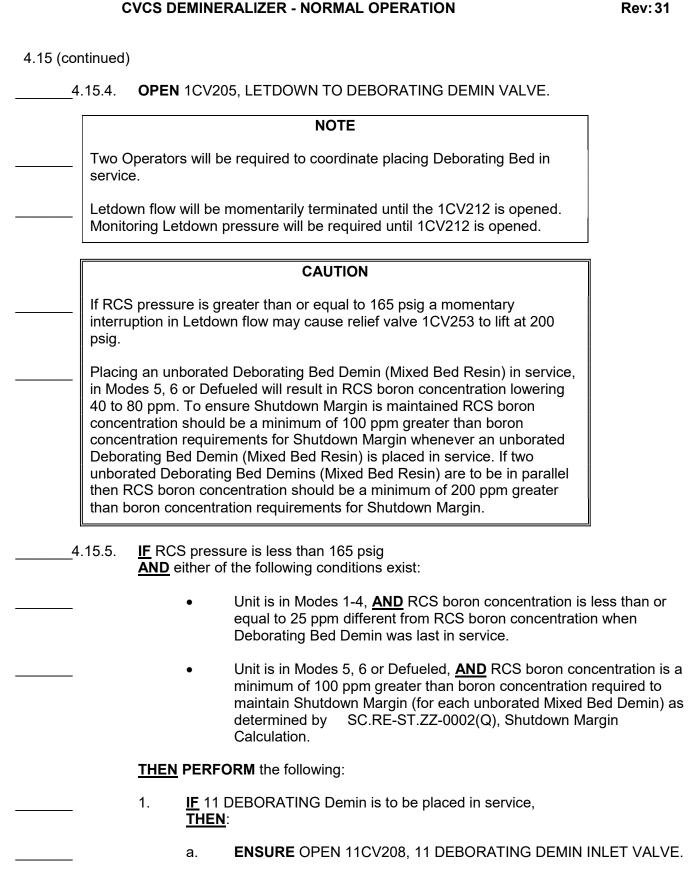

ENSURE OPEN 11CV210, 11 DEBORATING DEMIN OUTLET

b.


VALVE.

Page 65 of 125 Rev: 31

4.15.5.1 (continued) LOWER Letdown flow to 10-15 gpm with 1CV8, LETDOWN ISOL C. FOR RHR, while balancing Charging flow. d. **OPEN** 11CV206, 11 DEBORATING DEMIN INLET VALVE. Slowly **OPEN** 11CV215, DB DM VENT, to approximately ½ open, e. **THEN** have Control Room place 1CV21 in MIXED BED DIVERSION TO MIXED BED position AND PLACE in AUTO. f. **OPEN** 11CV209, 11 DEBORATING DEMIN OUTLET VALVE. 2. **IF** 12 DEBORATING Demin is to be placed in service, THEN: **ENSURE** OPEN 12CV208, 12 DEBORATING DEMIN INLET VALVE. a. ENSURE OPEN 12CV210, 12 DEBORATING DEMIN OUTLET b. VALVE. LOWER Letdown flow to 10-15 gpm with 1CV8, LETDOWN ISOL C. FOR RHR, while balancing Charging flow. d. **OPEN** 12CV206, 12 DEBORATING DEMIN INLET VALVE. Slowly **OPEN** 12CV215, DB DM VENT, to approximately ½ open, e. **THEN** have Control Room place 1CV21 in MIXED BED DIVERSION TO MIXED BED position AND PLACE in AUTO. f. **OPEN** 12CV209, 12 DEBORATING DEMIN OUTLET VALVE. 3. WHEN at least 10 minutes has elapsed, slowly OPEN 1CV212, DEBORATING DEMIN OUTLET VALVE, while **CLOSING** 11(12)CV215, DB DM VENT, as applicable. 4. ADJUST Letdown flow, as required, with the 1CV8, LETDOWN ISOL FOR RHR, while balancing Charging flow.

S DEMINERALIZER - NORMAL OPERATION Rev: 31

4.15.5 (continued)

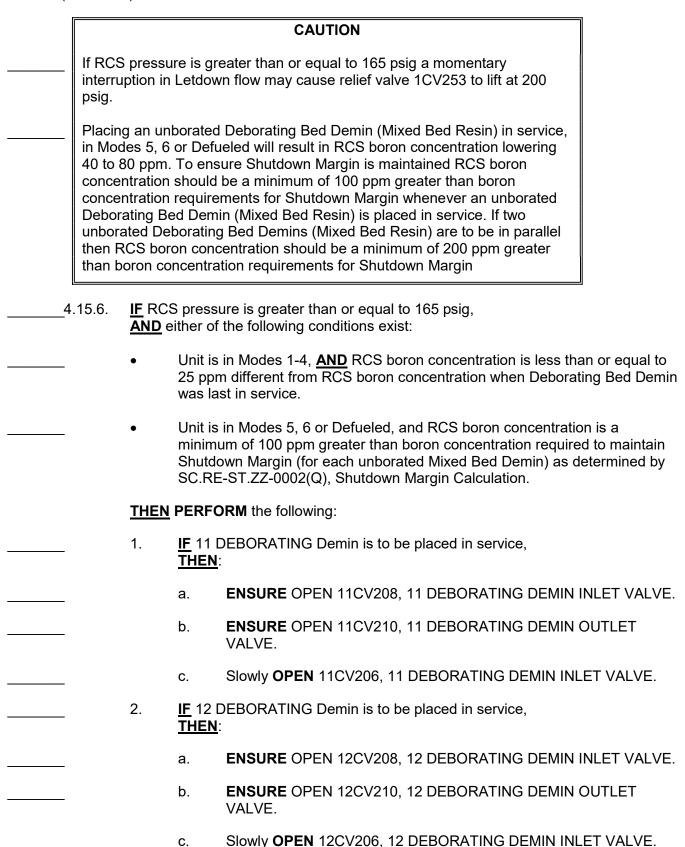

Page 67 of 125 Rev: 31

4.15.6 (continued) 3. **PERFORM** the following to fill, vent and pressurize Deborating Bed Demin piping: a. **ENSURE** CLOSED the following valves: (1) 1WR116, PW DM SYS STOP V (2) 1WR109, PW SPENT RESIN FLUSH VALVE 1WR135, PW DM SYS HDR DRN (3) (4) 1WR136, PW DM SYS HDR VENT (5) 1WR137, PW DM SYS HDR VENT (6)11CV236, MB DM PRI WTR SUP VALVE 12CV236, MB DM PRI WTR SUP VALVE (7) **OPEN** 1CV225, CATION DM OUTLET VALVE. b. OPEN 1CV230, CATION DM BKFSH INLET VALVE. C. OPEN 1CV222, PRI WTR TO DB DM BKFSH VALVE. d. IF placing 11 DB Demin in service, e. THEN: (1) OPEN 11CV219, DB DM BKFSH INLET VALVE. (2) Slowly **OPEN** 11CV215, DB DM VENT, for at least 2 minutes, THEN CLOSE valve. (3) CLOSE 11CV219, DB DM BKFSH INLET VALVE. f. **IF** placing 12 DB Demin in service, THEN: (1) **OPEN** 12CV219, DB DM BKFSH INLET VALVE Slowly **OPEN** 12CV215, DB DM VENT, for at least 2 minutes, (2) THEN CLOSE valve. (3) CLOSE 12CV219, DB DM BKFSH INLET VALVE. CLOSE 1CV222, PRI WTR TO DB DM BKFSH VALVE. g. h. **CLOSE** 1CV230, CATION DM BKFSH INLET VALVE. i. **CLOSE 1CV225, CATION DM OUTLET VALVE.**

Page 68 of 125 Rev: 31

4.15.6 (continued)				
	4.	<u>IF</u> placing 11 DB Demin in service, <u>THEN</u> OPEN 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.			
	5.	<u>IF</u> placing 12 DB Demin in service, <u>THEN</u> OPEN 12CV209, 12 DEBORATING DEMIN OUTLET VALVE.			
	6.	OPEN 1CV212, DEBORATING DEMIN OUTLET VALVE.			
	7.	PLACE 1CV21 in MIXED BED DIVERSION TO MIXED BED position AND PLACE in AUTO.			
		NOTE			
	Two Operators will be required to coordinate placing Deborating Bed in service.				
		will be momentarily terminated until the 1CV212 is opened.			

Rev: 31

CAUTION

If RCS pressure is greater than or equal to 165 psig a momentary interruption in Letdown flow may cause relief valve 1CV253 to lift at 200 psig.

Placing an unborated Deborating Bed Demin (Mixed Bed Resin) in service, in Modes 5, 6 or Defueled will result in RCS boron concentration lowering 40 to 80 ppm. To ensure Shutdown Margin is maintained RCS boron concentration should be a minimum of 100 ppm greater than boron concentration requirements for Shutdown Margin whenever an unborated Deborating Bed Demin (Mixed Bed Resin) is placed in service. If two unborated Deborating Bed Demins (Mixed Bed Resin) are to be in parallel then RCS boron concentration should be a minimum of 200 ppm greater than boron concentration requirements for Shutdown Margin.

_4.15.7. **IF** RCS pressure is less than 165 psig, **AND** either of the following conditions exist:

 Unit is in Modes 1-4, <u>AND</u> RCS boron concentration is greater than 25 ppm different from RCS boron concentration when Deborating Bed Demin was last in service.

OR

Unit is in Modes 5, 6 or Defueled <u>AND</u> RCS boron concentration is <u>NOT</u> a minimum of 100 ppm greater than boron concentration required to maintain Shutdown Margin (for each unborated Mixed Bed Demin) as determined by SC.RE-ST.ZZ-0002(Q), Shutdown Margin Calculation.

THEN PERFORM the following:

- 1. **THROTTLE** 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown flow to 45 GPM.
- ADJUST Charging flow as necessary to match Letdown flow.

Page 70 of 125

Rev: 31


4.15.7 (continued)

		NOTE
When bora		eborating bed demin, letdown flow should be less than VCT.
3.	PLA (CE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT ion.
4.	<u>IF</u> 11 <u>THE</u> I	DEBORATING Demin is to be placed in service, <u>N</u> :
	a.	ENSURE OPEN 11CV208, 11 DEBORATING DEMIN INLET VALVE.
	b.	ENSURE OPEN 11CV210, 11 DEBORATING DEMIN OUTLET VALVE.
	C.	LOWER Letdown flow to 10-15 gpm with 1CV8 while balancing Charging flow.
	d.	OPEN 11CV206, 11 DEBORATING DEMIN INLET VALVE.
	e.	Slowly OPEN 11CV215, DB DM VENT, to approximately 1/2 open, THEN have Control Room place 1CV21 in MIXED BED DIVERSION TO MIXED BED position AND PLACE in AUTO .
	f.	OPEN 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.
5.	<u>IF</u> 12 <u>THE</u> I	DEBORATING Demin is to be placed in service, N:
	a.	ENSURE OPEN 12CV208, 12 DEBORATING DEMIN INLET VALVE.
	b.	ENSURE OPEN 12CV210, 12 DEBORATING DEMIN OUTLET VALVE.
	C.	LOWER Letdown flow to 10-15 gpm with 1CV8 while balancing Charging flow.
	d.	OPEN 12CV206, 12 DEBORATING DEMIN INLET VALVE.
	e.	Slowly OPEN 12CV215, DB DM VENT, to approximately 1/2 open,
		THEN have Control Room place 1CV21 in MIXED BED DIVERSION TO MIXED BED position AND PLACE in AUTO.
	f.	OPEN 12CV209, 12 DEBORATING DEMIN OUTLET VALVE.
6.		ER a minimum of 10 minutes, slowly OPEN 1CV212, DEBORATING IN OUTLET VALVE, while CLOSING 11(12)CV215, as applicable.

Page 71 of 125 Rev: 31

4.15.7 (continued)			
	7.	ADJUST Letdown flow to 45 gpm with 1CV8 while balancing Charging flow.	
	8.	<u>WHEN</u> 500 gallons have been flushed through the Cation Bed Demin, ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling.	
	9.	RECORD results of sample on Attachment 3, CVCS Demin Borating Record.	
	10.	<u>IF</u> difference in boron concentration is greater than 25 ppm, <u>THEN</u> :	
		a. ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less).	
		b. RECORD results of samples on Attachment 3, CVCS Demin Borating Record.	
		c. <u>WHEN</u> difference in boron concentration is less than or equal to 25 ppm CONTINUE with this procedure.	
	11.	PLACE 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position AND PLACE in AUTO.	
	12.	ADJUST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired letdown flow.	
	13.	ADJUST Charging flow as necessary to match Letdown flow.	

Rev: 31

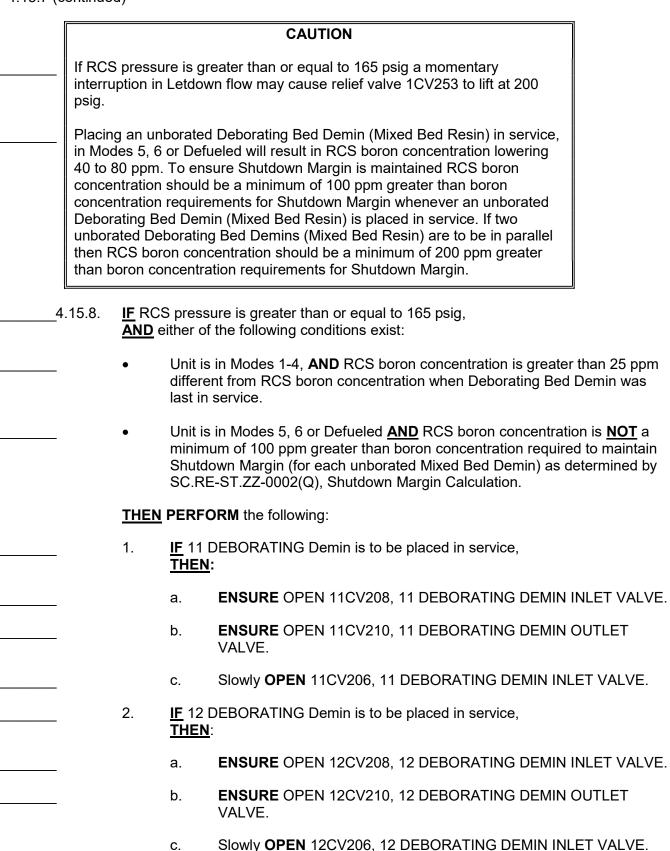

Page 73 of 125 Rev: 31

4.15.8 (continued)						
	3.	PERFO		DRM the following to fill, vent and pressurize Deborating Bed Demin			
		a.	ENSU	RE CLOSED the following valves:			
			(1)	1WR116, PW DM SYS STOP V			
			(2)	1WR109, PW SPENT RESIN FLUSH VALVE			
			(3)	1WR135, PW DM SYS HDR DRN			
			(4)	1WR136, PW DM SYS HDR VENT			
			(5)	1WR137, PW DM SYS HDR VENT			
			(6)	11CV236, MB DM PRI WTR SUP VALVE			
			(7)	12CV236, MB DM PRI WTR SUP VALVE			
		b.	OPEN	1CV225, CATION DM OUTLET VALVE.			
		C.	OPEN	1CV230, CATION DM BKFSH INLET VALVE.			
		d.	OPEN	1CV222, PRI WTR TO DB DM BKFSH VALVE.			
		e.	<u>IF</u> plac <u>THEN</u> :	cing 11 DB Demin in service,			
			(1)	OPEN 11CV219, DB DM BKFSH INLET VALVE.			
			(2)	Slowly OPEN 11CV215, DB DM VENT, for at least 2 minutes, THEN CLOSE valve.			
			(3)	CLOSE 11CV219, DB DM BKFSH INLET VALVE.			
		f.	<u>IF</u> plac <u>THEN</u> :	sing 12 DB Demin in service,			
			(1)	OPEN 12CV219, DB DM BKFSH INLET VALVE			
			(2)	Slowly OPEN 12CV215, DB DM VENT, for at least 2 minutes, THEN CLOSE valve.			
			(3)	CLOSE 12CV219, DB DM BKFSH INLET VALVE.			
		g.	CLOS	E 1CV222, PRI WTR TO DB DM BKFSH VALVE.			
		h.	CLOS	E 1CV230, CATION DM BKFSH INLET VALVE.			
		i	CI OSI	F 1CV225 CATION DM OUTLET VALVE			

Page 74 of 125 Rev: 31

4.15.8 (continued)						
	4.						
	5.	<u>IF</u> plac	cing 12	DB Demin in service,			
	THEN OPEN 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.						
	6.	OPEN	1CV21	12, DEBORATING DEMIN OUTLET VALVE.			
		a.					
		b.	Simult	taneously PERFORM the following:			
			(1)	OPEN 1CV3, 45 GPM ORIFICE ISOLATION VALVE.			
			(2)	VALVE, as necessary to maintain Letdown pressure for			
				NOTE			
	in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not						
		C.	<u>IF</u> con	strolling Letdown pressure in AUTO,			
			(1)	PLACE 1CV18 in AUTO			
			(2)				
		d.					
			(1)	· ·			
			(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).			
		e.	ADJU	ST Charging flow as necessary to match Letdown flow.			

Page 75 of 125 Rev: 31

4.15.8.7 (continued) f. WHEN Letdown pressure is at approximately 300 psig. ENSURE 1CV18 in AUTO. 8. IF Letdown is from RHR, THEN: a. THROTTLE 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown flow to 45 GPM. b. **ADJUST** Charging flow as necessary to match Letdown flow. NOTE When borating a Deborating bed demin, letdown flow should be less than makeup capacity to VCT. 9. PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT position. 10. PLACE 1CV21, LETDOWN DEMIN BYPASS, in MIXED BED DIVERSION TO MIXED BED position AND PLACE in AUTO. 11. **WHEN** 500 gallons have been flushed through the Cation Bed Demin. ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling. 12. **RECORD** results of sample on Attachment 3, CVCS Demin Borating Record. 13. **IF** difference in boron concentration is greater than 25 ppm, THEN: a. **ESTABLISH** Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less). b. **RECORD** results of samples on Attachment 3, CVCS Demin Borating Record. WHEN difference in boron concentration is less than or equal to 25 C. ppm, **CONTINUE** with this procedure. 14. PLACE 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position AND PLACE in AUTO.

Page 76 of 125 Rev: 31

4.15.8 (continued)									
	15.	<u>IF</u> No	rmal Le	tdown is in service,						
	THEN:									
		<u></u>	_							
		a.	PLAC MANU	E 1CV18, LETDOWN PRESSURE CONTROL VALVE, in JAL.						
		b.	Simul	taneously PERFORM the following:						
			(1)	OPEN 1CV4, LETDOWN ORIFICE ISOLATION VALVE, <u>OR</u> 1CV5, LETDOWN ORIFICE ISOLATION VALVE.						
			(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).						
				NOTE						
				perating the CV18 when closing orifice valves is						
	in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature.									
		C.	<u>IF</u> cor	ntrolling Letdown pressure in AUTO,						
			(1)	PLACE 1CV18 in AUTO						
			(2)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.						
		d.		ntrolling Letdown pressure in Manual, simultaneously ORM the following:						
			(1)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.						
			(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).						
		e.	ADJU	ST Charging flow as necessary to match Letdown flow.						
		f.		<u>N</u> Letdown pressure is at approximately 300 psig, ENSURE 8 in AUTO.						

Page 77 of 125

Rev: 31

4.15.8 (continued) 16. **IF** Letdown is from RHR, THEN: ADJUST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired a. letdown flow. b. **ADJUST** Charging flow as necessary to match Letdown flow. 4.15.9. **DIRECT** a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section Q. NOTE The Deborating Bed Demins may be temporarily removed from service only if it will be of a short enough duration that RCS Boron Concentration will not change by greater than 25 ppm and maintenance or operational activities are not allowed to occur which could drain the Deborating Bed Demins and their associated piping. If time is anticipated to be longer than this or maintenance/operational activities could occur which might drain the DB Bed Demins and their associated piping, they should be removed from service IAW Section 4.17 and returned to service IAW this section beginning at Step 4.15.1. 4.15.10. **IF** a temporary removal of Deborating Beds from service is required, THEN: PLACE 1CV21, LETDOWN DEMIN BYPASS, in MIXED BED DIVERSION 1. TO VCT position. 2. **WHEN** it is required to place Deborating Bed Demin back in service. THEN: **ENSURE** RCS boron concentration is less than or equal to 25 ppm a. different from RCS boron concentration when Deborating Bed Demin was last in service. b. **ENSURE** no maintenance or operational activities have occurred which might have drained the Deborating Bed Demins and their associated piping. PLACE 1CV21, LETDOWN DEMIN BYPASS, in MIXED BED C. DIVERSION TO MIXED BED position AND PLACE in AUTO.

Page 78 of 125

MAL OPERATION Rev: 31

4.16			g Deborating Bed Demins (with Mixed Bed or Cation Bed Resin) With No Mixed in Available									
	_4.16.1.	ENSU	ENSURE a Deborating Bed Demin is in service IAW Section 4.15.									
	4.16.2.	SC.CI	<u>IF</u> placing a demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, <u>THEN</u> COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill Valve Position Verification. [CRCA 70108974]									
	_4.16.3.	THEN	<u>IF</u> placing in service for Lithium control, <u>THEN</u> RECORD the amount of gallons to be flushed through the Deborating Bed Demin (as determined by Chemistry):									
				Gallons								
	4.16.4.		AIN from ast in se	n Chemistry RCS boron concentration when Deborating Bed Demin rvice.								
	_4.16.5.	boron	<u>IF</u> RCS boron concentration is less than or equal to 25 ppm different from RCS boron concentration when Deborating Bed Demin was last in service, <u>THEN</u> PERFORM the following:									
	_	1.	<u>IF</u> 11 THEN	DEBORATING Demin is to be placed in service, :								
	_		a.	ENSURE OPEN 11CV208, 11 DEBORATING DEMIN INLET VALVE.								
	_		b.	ENSURE OPEN 11CV210, 11 DEBORATING DEMIN OUTLET VALVE.								
			C.	Slowly OPEN 11CV206, 11 DEBORATING DEMIN INLET VALVE.								
	_		d.	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 11CV215, DB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.								
			e.	OPEN 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.								
			f.	CLOSE 12CV209, 12 DEBORATING DEMIN OUTLET VALVE.								
			g.	CLOSE 12CV206, 12 DEBORATING DEMIN INLET VALVE.								
	_	2.	<u>IF</u> 12 <u>THEN</u>	DEBORATING Demin is to be placed in service, :								
	_		a.	ENSURE OPEN 12CV208, 12 DEBORATING DEMIN INLET VALVE.								
			b.	ENSURE OPEN 12CV210, 12 DEBORATING DEMIN OUTLET VALVE.								
			С	Slowly OPEN 12CV206. 12 DEBORATING DEMIN INLET VALVE.								

Page 79 of 125 Rev: 31

4.16.5 (c	ontinue	d)			
			d.	THEN	and vent is required (Refer to Step 2.1.22), slowly OPEN 12CV215, DB DM VENT for at least 2 minutes, CLOSE valve.
			e.	OPEN	12CV209, 12 DEBORATING DEMIN OUTLET VALVE.
			f.	CLOS	E 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.
			g.	CLOS	E 11CV206, 11 DEBORATING DEMIN INLET VALVE.
4	.16.6.	than 2 was la	25 ppm ast in se	different ervice,	nistry determines present RCS boron concentration is greater t from RCS boron concentration when Deborating Bed Demin e following: [C0417]
		1.	<u>IF</u> Not		down is in service,
			a.	PLAC MANU	E 1CV18, LETDOWN PRESSURE CONTROL VALVE in JAL.
			b.	Simult	aneously PERFORM the following:
				(1)	OPEN 1CV3, 45 GPM ORIFICE ISOLATION VALVE.
				(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
					NOTE
	in AUT orifice lower (psig is outlet	O durii valves (~100 p approx temper	ng norn is flash sig) un kimately atures s	nal operaing in the C' 338 deshould b	erating the CV18 when closing orifice valves is ations. The primary concern when closing be letdown line. Letdown pressure will initially V18 can adjust. Saturation temperature at 100 begrees Fahrenheit. Regen heat exchanger be monitored to ensure temperatures are not temperature.
			C.	<u>IF</u> con	trolling Letdown pressure in AUTO,
				(1)	PLACE 1CV18 in AUTO
				(2)	CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.

Page 80 of 125 Rev: 31

4.16.6.1	(continued)						
		d.	<u>IF</u> controlling Letdown pressure in Manual, simultaneously PERFORM the following:				
			(1) CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.				
			(2) ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).				
		e.	ADJUST Charging flow as necessary to match Letdown flow.				
		f.	<u>WHEN</u> Letdown pressure is at approximately 300 psig, ENSURE 1CV18 in AUTO.				
	2.	<u>IF</u> Let <u>THEN</u>	down is from RHR, <u>I</u> :				
		a.	THROTTLE 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown flow to 45 GPM.				
		b.	ADJUST Charging flow as necessary to match Letdown flow.				
	MOTE When borating a Deborating bed demin, letdown flow should be less than makeup capacity to VCT.						
	3.	 PLACE 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT position. 					
	4.	<u>IF</u> 11 THEN	DEBORATING Demin is to be placed in service, <u>I</u> :				
		a.	ENSURE OPEN 11CV208, 11 DEBORATING DEMIN INLET VALVE.				
		b.	ENSURE OPEN 11CV210, 11 DEBORATING DEMIN OUTLET VALVE.				
		C.	Slowly OPEN 11CV206, 11 DEBORATING DEMIN INLET VALVE.				
		d.	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 11CV215, DB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.				
		e.	OPEN 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.				
		f.	CLOSE 12CV209, 12 DEBORATING DEMIN OUTLET VALVE.				
		a.	CLOSE 12CV206. 12 DEBORATING DEMIN INLET VALVE.				

Page 81 of 125 Rev: 31

4.16.6 (continued)	
	5.	<u>IF</u> 12 DEBORATING Demin is to be placed in service, <u>THEN</u> :
		a. ENSURE OPEN 12CV208, 12 DEBORATING DEMIN INLET VALVE.
		b. ENSURE OPEN 12CV210, 12 DEBORATING DEMIN OUTLET VALVE.
		c. Slowly OPEN 12CV206, 12 DEBORATING DEMIN INLET VALVE.
		d. <u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 12CV215, DB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.
		e. OPEN 12CV209, 12 DEBORATING DEMIN OUTLET VALVE.
		f. CLOSE 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.
		g. CLOSE 11CV206, 11 DEBORATING DEMIN INLET VALVE.
	6.	<u>WHEN</u> 500 gallons have been flushed through the Cation Bed Demin, ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling.
	7.	RECORD results of sample on Attachment 3, CVCS Demin Borating Record
	8.	<u>IF</u> difference in boron concentration is greater than 25 ppm, <u>THEN</u> :
		a. ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less).
		b. RECORD results of samples on Attachment 3, CVCS Demin Borating Record.
		c. <u>WHEN</u> difference in boron concentration is less than or equal to 25 ppm, CONTINUE with this procedure.
	9.	PLACE 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position AND PLACE in AUTO.
	10.	<u>IF</u> Normal Letdown is in service, <u>THEN</u> :
		a. PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in MANUAL.

Page 82 of 125 Rev: 31

4.16.6 (c	continued)									
	b.	Simul	Itaneously PERFORM the following:							
		(1)	OPEN 1CV4, LETDOWN ORIFICE ISOLATION VALVE, OR 1CV5, LETDOWN ORIFICE ISOLATION VALVE.							
		(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).							
			NOTE							
	The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature.									
	C.	<u>IF</u> cor	ntrolling Letdown pressure in AUTO,							
		(1)	PLACE 1CV18 in AUTO							
		(2)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.							
	d.		ntrolling Letdown pressure in Manual, simultaneously FORM the following:							
		(1)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.							
		(2)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).							
	e.	ADJU	JST Charging flow as necessary to match Letdown flow.							
	f.		<u>N</u> Letdown pressure is at approximately 300 psig, ENSURE 8 in AUTO.							
	11. <u>IF</u> Le <u>THE</u>		s from RHR,							
	a.		JST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired wn flow.							
	b.	ADJU	JST Charging flow as necessary to match Letdown flow.							

Page 83 of 125

Rev: 31

4.16 (continued) 4.16.7. **IF** DB Demin was placed in service for Lithium control (see Step 4.16.3) THEN: 1. **DETERMINE** amount of time Deborating Bed Demin is to remain in service using gallons recorded in Step 4.16.3 and Letdown flow AND RECORD below: _ gallons ÷ WHEN the Deborating Bed Demin has been in service for the time recorded 2. in Step, 4.16.7.1 **REMOVE** Deborating Bed Demin from service as follows: **IF** 11 DB Bed Demin was placed in service. a. **THEN PERFORM** the following: (1) **OPEN** 12CV206, DB DM INLET VALVE. (2) **OPEN** 12CV209, DB DM OUTLET VALVE. (3) CLOSE 11CV209, DB DM OUTLET VALVE. CLOSE 11CV206, DB DM INLET VALVE. (4) b. **IF** 12 DB Bed Demin was placed in service, **THEN PERFORM** the following: (1) **OPEN** 11CV206, DB DM INLET VALVE. (2) **OPEN** 11CV209, DB DM OUTLET VALVE. (3) **CLOSE** 12CV209, DB DM OUTLET VALVE. (4) CLOSE 12CV206, DB DM INLET VALVE. 4.16.8. **IF** 11 DEBORATING Demin is in service, IV THEN DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification, Section R. 4.16.9. IF 12 DEBORATING Demin is in service, THEN DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification, Section S.

Page 84 of 125

Rev: 31

4.17 Removing a Deborating Bed Demin from Service

4.17.1.	_	<u>IF</u> a Mixed Bed Demin is <u>NOT</u> in service, <u>THEN</u> :							
	1.	PLACE 1CV21 in MIXED BED DIVERSION TO VCT position.							
	2.	CLOSE 1CV205, LETDOWN TO DEBORATING DEMIN VALVE.							
4.17.2.		EE 1CV27, DEBORATING DEMIN THREE WAY INLET VALVE, in FLOW TO position.							
4.17.3.	CLOS	SE 1CV212, DEBORATING DEMIN OUTLET VALVE.							
4.17.4.		<u>IF</u> 11 DEBORATING Demin is to be removed from service, <u>THEN</u> :							
	1.	CLOSE 11CV206, 11 DEBORATING DEMIN INLET VALVE.							
	2.	CLOSE 11CV209, 11 DEBORATING DEMIN OUTLET VALVE.							
4.17.5.	<u>IF</u> 12 <u>THEN</u>	DEBORATING Demin is to be removed from service,							
	1.	CLOSE 12CV206, 12 DEBORATING DEMIN INLET VALVE.							
	2.	CLOSE 12CV209, 12 DEBORATING DEMIN OUTLET VALVE.							
4.17.6.	NOTI	FY Chemistry that 11 (12) Deborating Demin is removed from service.							
4.17.7.		CT a second Operator to perform Independent Verification IAW Attachment 7, endent Verification, Section T.							
4.17.8.		ATE Control Room Console Station Aid S1-OP-03-001, Deborating Bed							

Page 85 of 125 Rev: 31

4.18	Mixed B	ed Demin Operation During Shutdown Modes 3, 4, 5, 6 and Defueled								
	_4.18.1.	ENSURE letdown is in service.								
	_4.18.2.	ENSURE RCS temperature is less than or equal to 547°F.								
	_4.18.3.	NOTIFY Chemistry to coordinate placing Mixed Bed Demins in service as required for RCS chemistry control during RCS cleanup.								
	4.18.4.	IF placing a demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, THEN COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill Valve Position Verification. [CRCA 70108974]								
	_4.18.5.	<u>WHEN</u> directed by Chemistry, PLACE a Mixed Bed Demin in service as follows:								
	_	 OBTAIN from Chemistry RCS boron concentration when the Mixed Bed Demin to be placed in service was last in service. 								
	_	2. <u>IF</u> placing MB Demineralizer(s) in service concurrent with borating the RCS to Cold Shutdown conditions during a EOC shutdown <u>AND</u> concurrence from Reactor Engineering is obtained, <u>THEN</u> MARK Step 4.18.5.3 as N/A [70116043 / 80100486].								
		CAUTION								
	conce maint greate whene unbor conce	g an unborated Mixed Bed Demin in service will result in RCS boron ntration lowering 40 to 80 ppm. To ensure Shutdown Margin is ained RCS boron concentration should be a minimum of 100 ppm or than boron concentration requirements for Shutdown Margin ever an unborated Mixed Bed Demin is placed in service. If two ated Mixed Bed Demins are to be in parallel then RCS boron ntration should be a minimum of 200 ppm greater than boron ntration requirements for Shutdown Margin.								
	_	3. <u>IF</u> the MB Demin to be placed in service is greater than 25 ppm different from RCS boron concentration when it was last in service, <u>OR</u> contains new resin, <u>THEN</u> ENSURE RCS boron concentration is a minimum of 100 ppm greater than boron concentration required to maintain Shutdown Margin (for each unborated Mixed Bed Demin) as determined by SC.RE-ST.ZZ-0002(Q), Shutdown Margin Calculation.								
		4. ENSURE 1CV35. VCT THREE WAY INLET VALVE is in FLOW TO VCT								

position **AND PLACE** in AUTO.


Page 86 of 125 Rev: 31

4.18.5 (continued)				
	5.	<u>IF</u> the <u>THEN</u>		o Mixed	d Bed Demins in service,
		a.			V21, LETDOWN DEMIN BYPASS, selected to MIXED SION TO VCT.
		b.	ENSU VALV		OSED 11CV25, 11 MIXED BED DEMIN OUTLET
		C.	ENSU VALV		OSED 12CV25, 12 MIXED BED DEMIN OUTLET
				CA	UTION
-					nipulations are to be conducted slowly sin out of the demineralizer during the
	fill and vent.	io poto.	itiai to i	1101010	on out of the dominioralizar during the
	<u> </u>				
		d.	<u>IF</u> 11 THEN		BED Demin is to be placed in service,
			(1)	<u>IF</u> fill a	and vent is required (Refer to Step 2.1.22),
				(a)	Slowly THROTTLE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE 3 turns OPEN.
				(b)	Slowly OPEN 11CV234, MB DM VENT for at least 15 minutes, <u>THEN</u> CLOSE valve.
			(2)	Slowly VALV	OPEN 11CV25, 11 MIXED BED DEMIN OUTLET E
			(3)	Slowly	OPEN 11CV24, 11 MIXED BED DEMIN INLET E.
			(4)		IRE 1CV21, LETDOWN DEMIN BYPASS VALVE is in LOW TO MIXED BED position AND PLACE in AUTO.

Page 87 of 125 Rev: 31

4.18.5 (continued) **IF** 12 MIXED BED Demin is to be placed in service, e. THEN: (1) IF fill and vent is required (Refer to Step 2.1.22), THEN: (a) Slowly THROTTLE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE 3 turns OPEN. (b) Slowly **OPEN** 12CV234, MB DM VENT for at least 15 minutes, THEN CLOSE valve. Slowly **OPEN** 12CV25, 12 MIXED BED DEMIN OUTLET (2) VALVE. Slowly OPEN 12CV24, 12 MIXED BED DEMIN INLET (3) VALVE. ENSURE 1CV21, LETDOWN DEMIN BYPASS VALVE is in (4) the FLOW TO MIXED BED position AND PLACE in AUTO. IF a Mixed Bed Demin is in service, 6. THEN: ENSURE 1CV21, LETDOWN DEMIN BYPASS VALVE is in FLOW a. TO MIXED BED position AND PLACE in AUTO. IF 11 MIXED BED Demin is to be placed in service, b. THEN: Slowly OPEN 11CV24, 11 MIXED BED DEMIN INLET (1) VALVE. (2) **IF** fill and vent is required (Refer to Step 2.1.22), THEN slowly OPEN 11CV234, MB DM VENT for at least 2 minutes, **THEN** CLOSE valve. (3) Slowly **OPEN** 11CV25, 11 MIXED BED DEMIN OUTLET VALVE. IF 12 MIXED BED Demin is no longer required to be in (4) service, as determined by Chemistry, **THEN REMOVE** it from service as follows: **CLOSE** 12CV25, 12 MIXED BED DEMIN OUTLET (a) VALVE. **CLOSE** 12CV24, 12 MIXED BED DEMIN INLET (b) VALVE.

Page 88 of 125 Rev: 31

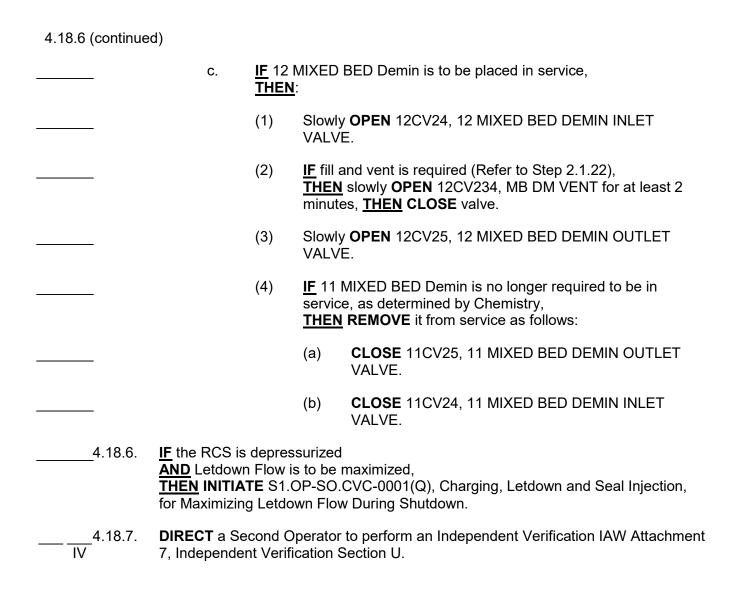

Page 89 of 125

Rev: 31

4.19 Cation Demin Operation During Shutdown Modes 3, 4, 5, 6 and Defueled

		NOTE	
	Steps	4.19.1 - 4.19.7 can be performed in any mode.	
4	.19.1.	ENSURE Letdown is in service.	
4	.19.2.	ENSURE Mixed Bed Demin is in service.	
4	.19.3.	<u>IF</u> placing a demineralizer in service following resin addition IAW SC.CH-AD.CVC-0412(Q), Primary Demineralizer Resin Addition, <u>THEN</u> COMPLETE Attachment 9, CVCS Demineralizers - Resin Fill Valve Posi Verification. [CRCA 70108974]	tion
4	.19.4.	Slowly OPEN 1CV224, CATION BED DEMIN INLET VALVE.	
4	.19.5.	Slowly OPEN 1CV226, CATION DM VENT.	
		NOTE	
	Vent C	Cation DM Bed for at least two minutes.	
4	.19.6.	WHEN venting is complete, CLOSE 1CV226, CATION DM VENT.	
4	.19.7.	CLOSE 1CV224, CATION BED DEMIN INLET VALVE.	
4	.19.8.	<u>WHEN</u> directed by Chemistry, PLACE CAT Bed Demin in service as follows:	
		 OBTAIN from Chemistry RCS boron concentration when the Cat Bed Do to be placed in service was last in service. 	emin
		CAUTION	
	should require	sure Shutdown Margin is maintained, RCS boron concentration d be a minimum of 25 ppm greater than boron concentration ements for Shutdown Margin whenever an unborated Cat Bed Demin ce in service.	
4	.19.9.	<u>IF</u> the Cat Bed Demin to be placed in service is >25 ppm different from the RCS boron concentration OR contains new resin, <u>THEN</u> ENSURE RCS boron concentration is a minimum of 25 ppm greater than boron concentration required to maintain Shutdown Margin as determined by SC.RE-ST.ZZ-0002(Q), Shutdown Margin Calculation.	
		1. IF the minimum shutdown margin requirements are not met, THEN PLACE the Cat Bed Demin in service IAW sections 4 10 or 4 11	

Rev: 31

4.10 (continued)

4. 19 (Continued)						
4.19.10.	PLACE 1CV35, VCT THREE WAY INLET VALVE, in FLOW TO HUT position.					
4.19.11.	Slowly OPEN 1CV224, CATION BED DEMIN INLET VALVE.					
4.19.12.	Slowly OPEN 1CV225, CATION BED DEMIN OUTLET VALVE.					
	NOTE					
Maxim	num flow through Cation Bed Demin is 75 gpm.					
4.19.13.	THROTTLE CLOSE 1CV26, CATION BED BYPASS VALVE, to obtain flow less than 75 gpm on FL-8864.					
4.19.14.	<u>WHEN</u> 500 gallons have been flushed through the Cation Bed Demin, PLACE 1CV35, VCT THREE WAY INLET VALVE, in FLOW TO VCT position <u>AND</u> PLACE in AUTO.					
4.19.15.	. <u>WHEN</u> requested by Chemistry, REMOVE the Cat Bed from service by performing the following:					
	1. OPEN 1CV26, CATION BED BYPASS VALVE.					
	2. CLOSE 1CV225, CATION BED DEMIN OUTLET VALVE.					
	3. CLOSE 1CV224, CATION BED DEMIN INLET VALVE.					
4.19.16.	DIRECT a second Operator to perform Independent Verification IAW Attachment 7, Independent Verification Section V.					

Page 91 of 125 Rev: 31

4.20	Complet	tion an	on and Review						
	_4.20.1.		PLETE Attachment 10, Completion Sign-Off Sheet, Sections A and B, AND VARD this procedure to CRS/SM for review and approval.						
	_4.20.2.	CRS/	CRS/SM PERFORM following:						
	_	1.	REVIEW this procedure with Attachments 3-10 for completeness and accuracy.						
	<u> </u>	2.	COMPLETE Attachment 10, Completion Sign-Off Sheet, Section 3.0.						
		3.	FORWARD completed procedure to Operations Staff.						

END of Instructions

5.0 REFERENCES AND COMMITMENTS

5.1 Commitments

5.1.1. C0417 - INPO SER 08-91

5.2 Performance References

- 5.2.1. Updated Final Safety Analysis Report:
 - 1. Section 9.3.4, Chemical and Volume Control System

5.2.2. Drawings:

1. 205228, No. 1 Unit Chemical and Volume Control System Operation - P&ID

5.2.3. PSBPs:

1. 304209, Salem Units 1 and 2 Precautions, Limitations, and Setpoints

5.2.4. Others:

- 1. DE-CB.CVC-0037(Q), Chemical and Volume Control Systems
- 2. DES-90-01505, CVCS Demineralizer Operating Procedures.
- 3. 80062317 OE 16305, Cation Demineralizer Unexpected Reactivity Results
- 4. 80077626-160 OE 20002, Turkey Point Bypass of Letdown Demineralizers and Filters due to Filter High Differential Pressure

5.2.5. Cross-References:

- 1. Procedures:
 - a. RM-AA-101, Records Management Program
 - b. S1.OP-SO.CVC-0001(Q), Charging, Letdown, and Seal Injection
 - c. S1.OP-SO.CVC-0004(Q), CVCS Holdup Tank System Operation
 - d. S1.OP-SO.CVC-0006(Q), Boron Concentration Control
 - e. S1.OP-SO.CVC-0007(Q), Fill and Vent of CVCS

5.3 Developmental References

5.3.1. None

6.0 RECORDS

6.1 Records Retention

- 6.1.1. Retain the following IAW-RM-AA-102, Control of Documents
 - Attachments 3-10

Rev: 31

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 1, Time Required To Saturate A Mixed Bed Demin

<u>NOTE</u>							
RCS BORON CONCENTRATION (ppm)	ted in this Attachment are b	RCS BORON CONCENTRATION (ppm)	gpm. TIME (minutes)				
2000	96	1000	191				
1950	98	950	201				
1900	101	900	212				
1850	103	850	225				
1800	106	800	239				
1750	109	750	255				
1700	112	700	273				
1650	116	650	294				
1600	119	600	319				
1550	123	550	347				
1500	127	500	382				
1450	132	450	425				
1400	137	400	478				
1350	142	350	546				
1300	147	300	637				
1250	153	250	764				
1200	159	200	956				
1150	166	150	1274				
1100	174	100	1912				
1050	182						

Rev: 31

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 2, Time Required To Saturate Cation Demin (IF Mixed Resin USED)

NOTE Times listed in this Attachment are based on a Letdown flow of 45 gpm.						
RCS BORON CONCENTRATION (ppm)	TIME (minutes)	RCS BORON CONCENTRATION (ppm)	TIME (minutes)			
2000	64	1000	128			
1950	66	950	134			
1900	68	900	142			
1850	69	850	150			
1800	71	800	160			
1750	73	750	170			
1700	75	700	182			
1650	78	650	196			
1600	80	600	213			
1550	82	550	232			
1500	85	500	255			
1450	88	450	284			
1400	92	400	319			
1350	95	350	364			
1300	98	300	425			
1250	102	250	510			
1200	106	200	638			
1150	111	150	850			
1100	116	100	1275			
1050	122					

Page 96 of 125

Rev: 31

Attachment 3, CVCS Demin Borating Record

	ELAPSED TIME	BORON CONCENTRATION (ppm)					
TIME	(in minutes)	CURRENT RCS	DEMIN OUTLET				

Page 97 of 125

Rev:31

Attachment 4, Deborating Bed Demineralizer Usage

		Tin	ne	In Ser	vice Time	Cumulative	
Demineralizer	Date	IN	OUT	Hours	Minutes	In Service Time (1)	
	<u> </u>						
	<u> </u>		<u> </u>				
	<u> </u>		<u> </u>				
			<u> </u> 				

⁽¹⁾ REQUEST Chemistry to sample the Deborating Bed Demineralizer outlet at least once per eight hours of Cumulative In Service Time.

Page 98 of 125

Rev: 31

Attachment 5, Alternate Letdown Sampling

A. <u>Backpressure Method:</u>

	CAUTION
is no that	revent an inadvertent reactivity event, a mixed bed or cation bed demin to be placed in service to the VCT until Chemistry has determined the demin inlet and outlet boron concentrations are within 25 ppm.
dem	Reactor Coolant Filter shall remain in service any time a CVCS ineralizer is in service. This will minimize the potential for resin duction into the RCS.
•	ENSURE the following valve positions:
	a. 1CV29, RC FILTER INLET PRESS TAP, OPEN.
	b. 1CV34, RC FILTER BYP VALVE, CLOSED.
	c. 1CV33, RC FILTER OUTLET VALVE, OPEN.
	CAUTION
dyna	en throttling 1CV28, continuous attendance is required due to the amic control of 1CV18 controller to ensure a pressure of 50 psig as on local 1PI137 is not exceeded.
	ESTABLISH communication with the Control Room.
•	Slowly THROTTLE CLOSED 1CV28, RC FILTER INLET VALVE, until in pressure, as read on 1PI137, is between 25-45 psig.

Rev: 31

CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 5, Alternate Letdown Sampling (continued)

4		JST 1CV18, LETDOWN PRESSURE CONTROLV VALVE, as necessary to ain Letdown pressure for current plant conditions (approximately 300 psig @
	a.	ADJUST Charging flow as necessary to match Letdown flow.
	b.	<u>IF</u> Letdown pressure is at 300 psig, <u>THEN</u> PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in AUTO.
		NOTE
	Continuou liquid was	is purging of sample is acceptable to reduce evolution time and te.
5	. NOTI	FY Chemistry to sample the demin outlet.
	dynamic d	caution ening 1CV28, continuous attendance is required due to the control of 1CV18 controller to ensure a pressure of 50 psig as cal 1PI137 is not exceeded.
6	. <u>WHE</u> VALV	<u>N</u> the Letdown Sample is obtained, slowly OPEN 1CV28, RC FILTER INLET (E.
7	. DIRE	CT a second Operator to perform Independent Verification of 1CV28 in the OPEN on.

S1.OP-SO.CVC-0012(Q)

CVCS DEMINERALIZER - NORMAL OPERATION Rev: 31

Attachment 6, Flushing CVCS Demin To WHUT

1.	DIRECT Chemistry to determine either of the following, as applicable:									
	a.		DETERMINE amout of time water is to be flushed through the applicable Mixed Bed Demineralizer AND RECORD time: TIME (min)							
		<u>OR</u>								
	b.		RMINE volume of water is to be flushed through the applicable Mixed demineralizer AND RECORD volume:VOL (gal)							
2.	(i.e., fl	a Mixed Bed Demineralizer is already in service, ., flushing an out-of-service MB Demin with the other MB Demin in-service) EN PERFORM flushing as follows:								
	a.	<u>IF</u> flushing 11 Mixed Bed Demin, <u>THEN</u> :								
		(1)	ENSURE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE is CLOSED.							
		(2)	Slowly OPEN 11CV24, 11 MIXED BED DEMIN INLET VALVE.							
		(3)	COORDINATE with the Control Room AND THROTTLE OPEN 11CV233, MB DM DRAIN.							
		(4)	<u>WHEN</u> the required flush time or volume (as applicable) recorded in Step 1.1 has been met, CLOSE 11CV233, MB DM DRAIN.							
		(5)	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 11CV234, MB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.							
		(6)	CLOSE 11CV24, 11 MIXED BED DEMIN INLET VALVE.							

Page 101 of 125

Rev: 31

CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 6, Flushing CVCS Demin To WHUT (continued)

 b.	<pre>IF flushing 12 Mixed Bed Demin, THEN:</pre>					
	(1)	ENSURE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE is CLOSED.				
	(2)	Slowly OPEN 12CV24, 12 MIXED BED DEMIN INLET VALVE.				
	(3)	COORDINATE with the Control Room <u>AND</u> THROTTLE OPEN 12CV233, MB DM DRAIN.				
	(4)	<u>WHEN</u> the required flush time or volume (as applicable) recorded in Step 1.1 has been met, CLOSE 12CV233, MB DM DRAIN.				
	(5)	<u>IF</u> fill and vent is required (Refer to Step 2.1.22), <u>THEN</u> slowly OPEN 12CV234, MB DM VENT for at least 2 minutes, <u>THEN</u> CLOSE valve.				
	(6)	CLOSE 12CV24, 12 MIXED BED DEMIN INLET VALVE.				

Rev: 31

CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 6, Flushing CVCS Demin To WHUT (continued)

3	3. <u>IF</u> a Mixed Bed Demineralizer is <u>NOT</u> already in service, <u>THEN</u> PERFORM flushing as follows:							
	a. ENSURE 1CV21, LETDOWN DEMIN BYPASS, in FLOW TO VCT position.							
	b. ESTABLISH communications between the Control Room and an Operator at 1PI-136.							
	C.	ADJU	ST Leto	down to	45 gpm by performing the following:			
		(1)	THEN	PLACI	out of service, E a 45 gpm orifice in service IAW VC-0001(Q), Charging, Letdown, and Seal Injection.			
		(2)	<u>IF</u> Nor <u>THEN</u>		tdown is in service,			
			(a)	PLAC MANU	E 1CV18, LETDOWN PRESSURE CONTROL VALVE, in JAL.			
			(b)	Simult	taneously PERFORM the following:			
				1.	OPEN 1CV3, 45 GPM ORIFICE ISOLATION VALVE.			
				2.	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).			
	NOTE							
	The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature.							
			(c)	<u>IF</u> con	ntrolling Letdown pressure in AUTO			
				•	PLACE 1CV18 in AUTO.			
				•	CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.			

Page 103 of 125


Rev: 31

CVCS DEMINERALIZER - NORMAL OPERATION

A	ttachm	ent 6, F	Flushing CVCS Demin To WHUT (continued)
		(d)	IF controlling Letdown pressure in Manual, simultaneously PERFORM the following:
			CLOSE 1CV4 or 1CV5, 75 GPM ORIFICE ISOLATION VALVE.
			 ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
		(e)	ADJUST Charging flow as necessary to match Letdown flow.
		(f)	$\underline{\text{WHEN}}$ Letdown pressure is at approximately 300 psig, ENSURE 1CV18 in AUTO.
	(3)	<u>IF</u> Lete	down is from RHR, :
		(a)	THROTTLE 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown flow to 45 GPM.
		(b)	ADJUST Charging flow as necessary to match Letdown flow.
d.	<u>IF</u> flus	hing 11	MIXED BED Demin,
	<u>THEN</u>		
	(1)	ENSU CLOS	RE 11CV25, 11 MIXED BED DEMIN OUTLET VALVE is ED.
	(2)	THRO OPEN	TTLE 11CV24, 11 MIXED BED DEMIN INLET VALVE 3 turns
	(3)	OPEN	11CV233, MB DM DRAIN.
 e.	<u>IF</u> flus <u>THEN</u>	•	MIXED BED Demin,
	(1)	ENSU CLOS	RE 12CV25, 12 MIXED BED DEMIN OUTLET VALVE is ED.
	(2)	THRO OPEN	TTLE 12CV24, 12 MIXED BED DEMIN INLET VALVE 3 turns
	(3)	OPEN	12CV233, MB DM DRAIN.

Rev: 31

Attachment 6, Flushing CVCS Demin To WHUT (continued)

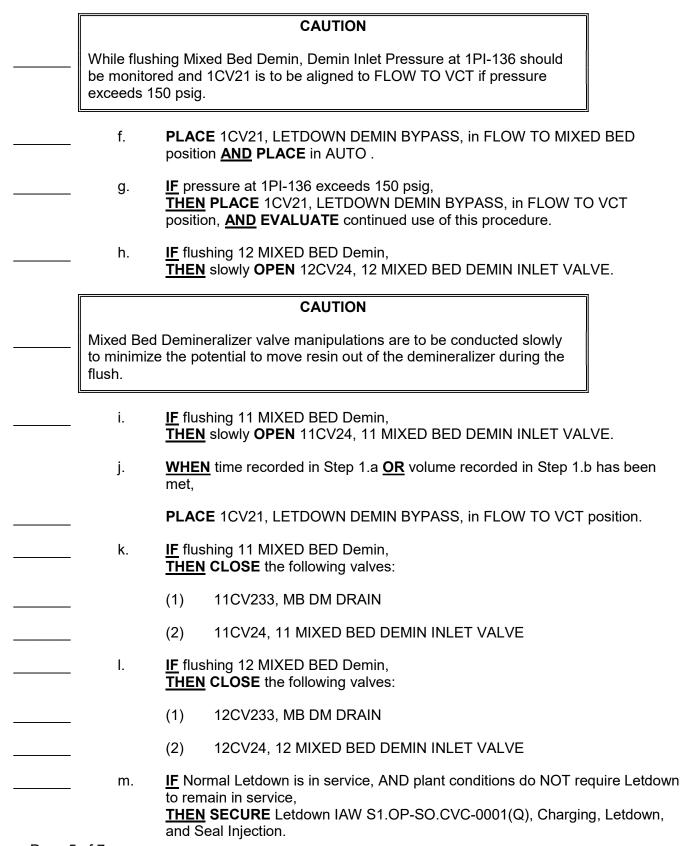

Rev: 31

Attachment 6, Flushing CVCS Demin To WHUT (continued)

 a.	<u>IF</u> Normal Letdown is in service, AND plant conditions require a 75 gpm orifice in service, <u>THEN</u> :				
	(1)) PLACE 1CV18, LETDOWN PRESSURE CONTROL VALVE, in MANUAL.			
	(2)	Simult	Simultaneously PERFORM the following:		
		(a)	OPEN 1CV4, ORIFICE ISOLATION VALVE, <u>OR</u> 1CV5, 75 GPM Orifice Isolation Valve.		
		(b)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).		
			NOTE		
The preferred method for operating the CV18 when closing orifice valves is in AUTO during normal operations. The primary concern when closing orifice valves is flashing in the letdown line. Letdown pressure will initially lower (~100 psig) until the CV18 can adjust. Saturation temperature at 100 psig is approximately 338 degrees Fahrenheit. Regen heat exchanger outlet temperatures should be monitored to ensure temperatures are not expected to reach saturation temperature.					
 (3) <u>IF</u> controlling Letdown pressure in AUTO,					
		(a)	PLACE 1CV18 in AUTO		
		(b)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.		
	(4) <u>IF</u> controlling Letdown pressure in Manual, simultaneously PERF the following:		ntrolling Letdown pressure in Manual, simultaneously PERFORM llowing:		
		(a)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.		
		(b)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).		
	(5)	ADJU	ST Charging flow as necessary to match Letdown flow.		
	(6)	WHEN	Letdown pressure is at approximately 300 psig, ENSURE 1CV18 TO.		

Page 106 of 125

CVCS DEMINERALIZER - NORMAL OPERATION

Rev: 31

	Attachn	nent 6, Flushing CVCS Demin To WHUT (continued)			
	_ b. <u>IF</u> Letdown is from RHR, <u>THEN</u> :				
	(1)	ADJUST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired letdown flow.			
	(2)	ADJUST Charging flow as necessary to match Letdown flow.			
2.		PLACE a Mixed Bed Demineralizer in service IAW Sections 4.1 through ion 4.18, as applicable.			

Rev: 31

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification

A. Borating a Mixed Bed Demin With No Other Mixed Bed Demin In Service

Valve	Description	Required Position	IV	Date
11CV24	11 MIXED BED DEMIN INLET VALVE	(1)		
110724		(1)		
11CV25	11 MIXED BED DEMIN OUTLET VALVE VALVE	(1)		
11CV234	MB DM VENT	CLOSED		
12CV24	12 MIXED BED DEMIN INLET VALVE	(1)		
12CV25	12 MIXED BED DEMIN OUTLET VALVE	(1)		
12CV234	MB DM VENT	CLOSED		

(1) OPEN when Demin is in service, CLOSED when Demin is out of service.

B. Borating Standby Mixed Bed Demin (11 MB DEMIN)

Valve	Description	Required Position	IV	Date
11CV24	11 MIXED BED DEMIN INLET VALVE	OPEN		
11CV25	11 MIXED BED DEMIN OUTLET VALVE	OPEN		
11CV234	MB DM VENT	CLOSED		
12CV24	12 MIXED BED DEMIN INLET VALVE	CLOSED		
12CV25	12 MIXED BED DEMIN OUTLET VALVE	CLOSED		

Page 108 of 125

Rev: 31

Attachment 7, Independent Verification (continued)

C. Borating Standby Mixed Bed Demin (12 MB DEMIN)

Valve	Description	Required Position	IV	Date
12CV24	12 MIXED BED DEMIN INLET VALVE	OPEN		
12CV25	12 MIXED BED DEMIN OUTLET VALVE	OPEN		
12CV234	MB DM VENT	CLOSED		
11CV24	11 MIXED BED DEMIN INLET VALVE	CLOSED		
11CV25	11 MIXED BED DEMIN OUTLET VALVE	CLOSED		

D. Placing a Borated Mixed Bed Demin In Service (11 MB DEMIN)

Valve	Description	Required Position	IV	Date
11CV24	11 MIXED BED DEMIN INLET VALVE	OPEN		
110724	THINKED DED DEIVING INCELL VALVE	OI LIV		
11CV25	11 MIXED BED DEMIN OUTLET VALVE	OPEN (1)		
11CV234	MB DM VENT	CLOSED		
12CV24	12 MIXED BED DEMIN INLET VALVE	CLOSED		
12CV25	12 MIXED BED DEMIN OUTLET VALVE	CLOSED		

(1) May be throttled to control Letdown flow

Attachment 7, Independent Verification (continued)

E. Placing a Borated Mixed Bed Demin In Service (12 MB DEMIN)

Valve	Description	Required Position	IV	Date
12CV24	12 MIXED BED DEMIN INLET VALVE	OPEN		
120 724	12 WINED DED DEWIN INCET VALVE	OI LIV		
12CV25	12 MIXED BED DEMIN OUTLET VALVE	OPEN (1)		
400) (00 4		01.00=5		
12CV234	MB DM VENT	CLOSED		
11CV24	11 MIXED BED DEMIN INLET VALVE	CLOSED		
11CV25	11 MIXED BED DEMIN OUTLET VALVE	CLOSED		

(1) May be throttled to control Letdown flow.

F. Placing a Borated Standby Mixed Bed Demin In Service for RCS Chemistry Control

Valve	Description	Required Position	IV	Date
11CV24	11 MIXED BED DEMIN INLET VALVE	(1)		
11CV25	11 MIXED BED DEMIN OUTLET VALVE	(1)		
12CV24	12 MIXED BED DEMIN INLET VALVE	(1)		
12CV25	12 MIXED BED DEMIN OUTLET VALVE	(1)		

(1) OPEN when Demin is in service, CLOSED when Demin is out of service.

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification (continued)

G. Removing CVCS Demin Header from Service

Valve	Description	Required Position	IV	Date
11CV24	11 MIXED BED DEMIN INLET VALVE	CLOSED		
11CV25	11 MIXED BED DEMIN OUTLET VALVE	CLOSED		
12CV24	12 MIXED BED DEMIN INLET VALVE	CLOSED		
12CV25	12 MIXED BED DEMIN OUTLET VALVE	CLOSED		

H. Placing a Non-Borated Cation Bed Demin (with Mixed Resin) In Service

Valve	Description	Required Position	IV	Date
1CV224	1 CATION BED INLET VALVE	(1)		
1CV225	1 CATION BED OUTLET VALVE	(1)		
1CV26	CATION BED BYPASS VALVE	(2)		
1CV226	CATION DM VENT	CLOSED		

- (1) OPEN when Demin is in service, CLOSED when Demin is out of service.
- (2) THROTTLED for desired flow on FL-8864 when Demin is in service, OPEN when Demin is out of service.

Attachment 7, Independent Verification (continued)

I. Placing a Borated Cation Bed Demin (with Mixed Resin) In Service

Valve	Description	Required Position	IV	Date
1CV224	1 CATION BED INLET VALVE	OPEN		
1CV225	1 CATION BED OUTLET VALVE	OPEN		
1CV26	CATION BED BYPASS VALVE	(1)		
1CV226	CATION DM VENT	CLOSED		

(1) THROTTLED to obtain desired flow on FL-8864

J. <u>Placing a Borated Cation Bed Demin (with Mixed Resin) In Service for RCS Chemistry Control</u>

Valve	Description	Required Position	IV	Date
1CV224	1 CATION BED INLET VALVE	CLOSED		
1CV225	1 CATION BED OUTLET VALVE	CLOSED		
1CV26	CATION BED BYPASS VALVE	OPEN		

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification (continued)

K. Placing a Cation Bed Demin (with Cation Resin) In Service

Valve	Description	Required Position	IV	Date
1CV224	1 CATION BED INLET VALVE	(1)		
1CV225	1 CATION BED OUTLET VALVE	(1)		
1CV26	CATION BED BYPASS VALVE	(2)		
1CV226	CATION DM VENT	CLOSED		

- (1) OPEN when Demin is in service, CLOSED when Demin is out of service.
- (2) THROTTLED to obtain desired flow on FL-8864 when Demin is in service, OPEN when Demin is out of service.

L. Placing a Cation Bed Demin (with Cation Resin) In Service for RCS Chemistry Control

Valve	Description	Required Position	IV	Date
1CV224	1 CATION BED INLET VALVE	CLOSED		
1CV225	1 CATION BED OUTLET VALVE	CLOSED		
1CV26	CATION BED BYPASS VALVE	OPEN		

M. Removing the Cation Bed Demin from Service

Valve	Description	Required Position	IV	Date
1CV224	1 CATION BED INLET VALVE	CLOSED		
1CV225	1 CATION BED OUTLET VALVE	CLOSED		
1CV26	CATION BED BYPASS VALVE	OPEN		

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification (continued)

N. Placing 11 DEBORATING Bed Demin In Service (Mixed Bed Demin Available)

Valve	Description	Required Position	IV	Date
1CV212	DEBORATING DEMIN OUTLET VALVE	OPEN		
11CV215	DB DM VENT	CLOSED		
11CV206	11 DEBORATING DEMIN INLET VALVE	OPEN		
11CV208	11 DEBORATING DEMIN INLET VALVE	OPEN		
11CV210	11 DEBORATING DEMIN OUTLET VALVE	OPEN		
11CV209	11 DEBORATING DEMIN OUTLET VALVE	OPEN		

O. Placing 12 DEBORATING Bed Demin In Service (Mixed Bed Demin Available)

Valve	Description	Required Position	IV	Date
1CV212	DEBORATING DEMIN OUTLET VALVE	OPEN		
12CV215	DB DM VENT	CLOSED		
12CV206	12 DEBORATING DEMIN INLET VALVE	OPEN		
12CV208	12 DEBORATING DEMIN INLET VALVE	OPEN		
12CV210	12 DEBORATING DEMIN OUTLET VALVE	OPEN		
12CV209	12 DEBORATING DEMIN OUTLET VALVE	OPEN		

P. Placing a Deborating Bed Demin In Service (Mixed Bed Demin Available)

Valve	Description	Required Position	IV	Date
1CV205	Letdown To Deborating Demin Valve	CLOSED		

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification (continued)

Q. <u>Placing a Deborating Bed Demin (with Mixed Bed or Cation Bed Resin) In Service With No Mixed Bed Demin Available</u>

Valve	Description	Required Position	IV	Date
1CV205	LETDOWN TO DEBORATING DEMIN VALVE	OPEN		
1CV212	DEBORATING DEMIN OUTLET VALVE	OPEN		
1CV225	CATION DM OUTLET VALVE	CLOSED		
1CV230	CATION DM BKFSH INLET VALVE	CLOSED		
1CV222	PRI WTR TO DB DM BKFSH VALVE	CLOSED		
11CV219	DB DM BKFSH INLET VALVE	CLOSED		
11CV215	DB DM VENT	CLOSED		
11CV206	11 DEBORATING DEMIN INLET VALVE	(1)		
11CV209	11 DEBORATING DEMIN OUTLET VALVE	(1)		
12CV219	DB DM BKFSH INLET VALVE	CLOSED		
11CV215	DB DM VENT	CLOSED		
12CV206	12 DEBORATING DEMIN INLET VALVE	(1)		
12CV209	12 DEBORATING DEMIN OUTLET VALVE	(1)		

(1) OPEN when Demin is in service, CLOSED when Demin is out of service.

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification (continued)

R. <u>Swapping Deborating Bed Demins (Mixed Bed or Cation Bed Resin) With No Mixed Bed Demin Available (11 DB Demin In Service)</u>

Valve	Description	Required Position	IV	Date
440)/045		01 0055		
11CV215	DB DM VENT	CLOSED	1	
11CV206	11 DEBORATING DEMIN INLET VALVE	OPEN		
11CV209	11 DEBORATING DEMIN OUTLET VALVE	OPEN		
12CV206	12 DEBORATING DEMIN INLET VALVE	CLOSED		
12CV209	12 DEBORATING DEMIN OUTLET VALVE	CLOSED		

S. <u>Swapping Deborating Bed Demins (Mixed Bed or Cation Bed Resin) With No Mixed Bed Demin Available (12 DB Demin In Service)</u>

Valve	Description	Required Position	IV	Date
12CV215	DB DM VENT	CLOSED	i i	
12CV206	12 DEBORATING DEMIN INLET VALVE	OPEN		
12CV209	12 DEBORATING DEMIN OUTLET VALVE	OPEN		
11CV206	11 DEBORATING DEMIN INLET VALVE	CLOSED		
11CV209	11 DEBORATING DEMIN OUTLET VALVE	CLOSED		

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification (continued)

T. Removing a Deborating Bed Demin from Service

Valve	Description	Required Position	IV	Date
1CV205	LETDOWN TO DEBORATING DEMIN VALVE	CLOSED (2)		
1CV212	DEBORATING DEMIN OUTLET VALVE	CLOSED		
11CV206	11 DEBORATING DEMIN INLET VALVE	(1)		
11CV209	11 DEBORATING DEMIN OUTLET VALVE	(1)		
12CV206	12 DEBORATING DEMIN INLET VALVE	(1)		
12CV209	12 DEBORATING DEMIN OUTLET VALVE	(1)		

- (1) OPEN when Demin is in service, CLOSED when Demin is out of service.
- (2) 1CV205 may remain open if Letdown is aligned to Deborating Beds.

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 7, Independent Verification (continued)

U. <u>Mixed Bed Demin Operation During Shutdown Modes 3, 4, 5, 6 and Defueled</u>

Valve	Description	Required Position	IV	Date
1CV21	LETDOWN DEMIN BYP V	FLOW TO MIXED BED		
1CV35	VCT 3 WAY INLET V	FLOW TO VCT		
11CV24	11 MB DEMIN INLET V	(1)		
11CV25	11 MB DEMIN OUTLET V	(1)		
11CV234	MB DM VENT	CLOSED		
12CV24	12 MB DEMIN INLET V	(1)		
12CV25	12 MB DEMIN OUTLET V	(1)		
12CV234	MB DM VENT	CLOSED		

(1) OPEN when MB Demin is in service, CLOSED when MB Demin is out of service.

V. Removing the Cation Bed Demin from Service

Valve	Description	Required Position	IV	Date
1CV224	1 CATION BED INLET VALVE	CLOSED		
1CV225	1 CATION BED OUTLET VALVE	CLOSED		
1CV226	CATION DM VENT	CLOSED		
1CV26	CATION BED BYPASS VALVE	OPEN		

CVCS DEMINERALIZER - NORMAL OPERATION

Rev: 31

Attachment 8, Flushing A Deborating Bed Demineralizer When Present RCS Cb Is Greater Than 25 ppm Different From Previous Cb

		ed by F led Den	Procedure Step 4.14.12.2, PERFORM the following to flush the nin:
 a.	<u>IF</u> No		tdown is in service,
	(1)	_	E 1CV18, LETDOWN PRESSURE CONTROL VALVE in JAL.
	(2)	Simul	taneously PERFORM the following:
		(a)	OPEN 1CV3, 45 GPM ORIFICE ISOLATION VALVE.
		(b)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
			NOTE
in AUTO of orifice valves lower (~10 psig is approutlet tem	luring n ves is fla 00 psig) proxima peratura to reach	ormal o ashing i until the tely 338 es shou n satura	perating the CV18 when closing orifice valves is perations. The primary concern when closing in the letdown line. Letdown pressure will initially e CV18 can adjust. Saturation temperature at 100 degrees Fahrenheit. Regen heat exchanger lid be monitored to ensure temperatures are not tion temperature.
	(3)	<u>IF</u> cor	ntrolling Letdown pressure in AUTO,
		(a)	PLACE 1CV18 in AUTO
		(b)	CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.
	(4)		ntrolling Letdown pressure in Manual, simultaneously PERFORM llowing:
		(a)	CLOSE 1CV4 OR 1CV5, 75 GPM ORIFICE ISOLATION VALVE.
		(b)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
	(5)	ADJU	JST Charging flow as necessary to match Letdown flow.
	(6)	WHE	N Letdown pressure is at approximately 300 psig, ENSURE 1CV18

S1.OP-SO.CVC-0012(Q)

Page 119 of 125

Rev: 31

CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 8, Flushing A Deborating Bed Demineralizer When Present RCS Cb Is Greater Than 25 ppm Different From Previous Cb a. IF Letdown is from RHR, THEN: (1) THROTTLE 1CV8, LETDOWN ISOL FOR RHR, to reduce letdown flow to 45 GPM. (2) ADJUST Charging flow as necessary to match Letdown flow.

S1.OP-SO.CVC-0012(Q) **CVCS DEMINERALIZER - NORMAL OPERATION**

Attachment 8, Flushing A Deborating Bed Demineralizer When Present RCS Cb Is Greater Than 25 ppm Different From Previous Cb (continued)

		NOTE
	•	Deborating bed demin, letdown flow should be less than
makeup ca	apacity	to VCT.
 b.	PLAC	E 1CV35, VCT THREE WAY INLET VALVE in FLOW TO HUT position.
 C.		E 1CV27, DEBORATING DEMIN THREE WAY INLET VALVE in FLOW B BED position.
 d.	ESTA	<u>N</u> 500 gallons have been flushed through the Cation Bed Demin, ABLISH Alternate Letdown Sampling Backpressure Method IAW hment 5, Alternate Letdown Sampling.
 e.	RECO	DRD results of sample on Attachment 3, CVCS Demin Borating Record.
 f.	<u>IF</u> diff	erence in boron concentration is greater than 25 ppm, <u>l</u> :
	(1)	ESTABLISH Alternate Letdown Sampling Backpressure Method IAW Attachment 5, Alternate Letdown Sampling (at intervals of 30 minutes or less).
	(2)	RECORD results of samples on Attachment 3, CVCS Demin Borating record.
	(3)	<u>WHEN</u> difference in boron concentration is less than or equal to 25 ppm, CONTINUE with this procedure.
 g.	PLAC in AU	E 1CV35, VCT 3 WAY INLET V, in FLOW TO VCT position <u>AND</u> PLACE TO .

Page 121 of 125

Rev:31

Attac	hment 8, FI			orating Bed Demineralizer When Present RCS Cb Is Greater n Different From Previous Cb (continued)
	h.	<u>IF</u> No		tdown is in service,
		(1)	PLAC MANU	E 1CV18, LETDOWN PRESSURE CONTROL VALVE, in JAL.
		(2)	Simul	taneously PERFORM the following:
			(a)	OPEN 1CV4, LETDOWN ORIFICE ISOLATION VALVE, <u>OR</u> 1CV5, LETDOWN ORIFICE ISOLATION VALVE.
			(b)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL VALVE, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
				NOTE
	in AUTO d orifice valv lower (~10 psig is app outlet temp	uring n res is fla 0 psig) proxima perature	ormal op ashing in until the tely 338 as shoul	perating the CV18 when closing orifice valves is perations. The primary concern when closing in the letdown line. Letdown pressure will initially e CV18 can adjust. Saturation temperature at 100 degrees Fahrenheit. Regen heat exchanger lid be monitored to ensure temperatures are not tion temperature.
		(3)	<u>IF</u> con	ntrolling Letdown pressure in AUTO,
			(a)	PLACE 1CV18 in AUTO
			(b)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.
		(4)		ntrolling Letdown pressure in Manual, simultaneously PERFORM llowing:
			(a)	CLOSE 1CV3, 45 GPM ORIFICE ISOLATION VALVE.
			(b)	ADJUST 1CV18, LETDOWN PRESSURE CONTROL, as necessary to maintain Letdown pressure for current plant conditions (approximately 300 psig @ NOP).
		(5)	ADJU	IST Charging flow as necessary to match Letdown flow.
		(6)	WHEN	N Letdown pressure is at approximately 300 psig, ENSURE 1CV18 TO.

CVCS DEMINERALIZER - NORMAL OPERATION

Attachment	8, Flusi	Than 25 ppm Different From Previous Cb
 a		Letdown is from RHR, <u>EN</u> :
 	(1	ADJUST 1CV8, LETDOWN ISOL FOR RHR, to obtain desired letdown flow.
 	(2	ADJUST Charging flow as necessary to match Letdown flow.
h	R	TURN TO Procedure Step 4 14 12 3

S1.OP-SO.CVC-0012(Q) CVCS DEMINERALIZER - NORMAL OPERATION

Attachment 9, CVCS Demineralizers - Resin Fill Valve Position Verification

Valve	Description	Position	Notes	Initials
11CV231				
12CV231	MB DM RESIN FILL V	X - CAPPED	(1) (2) (3)	
1CV227	CATION DM RESIN FILL V	X - CAPPED	(1) (3)	
11CV213				
12CV213	DB DM RESIN FILL V	X - CAPPED	(1) (3)	

- (1) Radiation Protection support is required when removing any Resin Fill V pit cover (Aux. 122'). Verify valve position for the demineralizer(s) being placed in service. Mark others as N/A.
- (2) 11CV231 and 12CV231 are located under the same Resin Fill V pit cover.
- (3) The Resin Fill V pit cover is to be replaced following valve position verification.

Page 124 of 125

Rev: 31

Attachment 10, Completion Sign-Off Sheet

Α.	COMMENTS:
	(Include test deficiencies and corrective actions.)

Page 125 of 125

Rev: 31

Attachment 10, Completion Sign-Off Sheet (continued)

Print	Initials	Signature	Date
		_	
		_	<u> </u>
		_	
		_	
		_	
INDEPENDENT VE	RIFICATION:		
INDEPENDENT VE	RIFICATION: Initials	Signature	Date
		Signature	Date
	Initials		Date
CRS/SM FINAL RE	Initials VIEW AND APPRO	VAL:	
CRS/SM FINAL RET	Initials VIEW AND APPRO Attachments 3-10 is		ness and accuracy. Al